BLAUPUNKT

使用説明書 User Manual

BPB-M07HU



Enjoy it.

目 錄

1.免責聲明1	7.安裝説明
2.緊急處理方法&警告2	8.使用説明&充電
3.安全注意事項2	9.規格
4.特點説明3	10.清潔及保養方法
5.各部位名稱3	11.簡易故障排除
6.按摩頭4	12.收藏及方法

免責聲明

本手冊經仔細檢查及校對,但仍不排除文字拼寫及技術錯誤之可能, 若因錯誤導致與實機不符時,以實機為准,此種錯誤或疏漏不能當呈 堂的依據,其將於新版予以修正。

本手冊之全部內容,本公司享有隨時修改之權力,且不另行通知。

緊急處理方法&警告

當發生異常或有燒焦味時,應立即停止使用,並與本公司服務專線聯絡或就近經銷商洽詢,若在異常狀態下繼續使用易發生火災之危險。

為了避免火災或是電擊的危險,請勿讓本機暴露於雨中或濕氣中。 電源請確實插牢於電源插座內,以免因未插牢而引起插頭產生高熱, 而造成意外。

電源線或電源底座若損壞時,請速與本公司服務專線聯絡或就近經銷商 洽詢。

安全注意事項

在使用本機之前,應仔細閱讀下列事項及使用説明閱後並請妥為收存, 以備將來參考:



安裝按摩頭啟動機器時 不可觸摸此部位



未安裝按摩頭啟動機器時 不可觸摸此部位

- 1. 孩童應受監護,以確保孩童不嬉玩電器。
- 本電器不預期供生理、感知、心智慧力、經驗或知識不足之使用者(包含 孩童)使用,除非在對其負有安全責任的人員之監護或指導下安全使用。
- 3. 遠離液體或熱源,保持通風口沒有灰塵。
- 4. 不能在充電時使用本產品。
- 5. 請按照使用説明資料使用本產品。
- 6. 每次使用前按照本書操作方法仔細檢查產品是否能正常使用。

特點説明

- LED大螢幕 顯示段數/電量
- 5段變速擊打,每分鐘可提供高達3500次震擊
- 觸控開關/段數調整
- 標準無刷電機,震擊深層筋膜,幫助肌肉放鬆,深層緩解肌肉酸痛
- 専用USB充電線
- 可充電式電池,每次充電可使用約4~11小時以上 (具體使用時間依使用檔位強弱而定)
- 3款按摩頭,舒緩各部位肌肉
- 約590 G小巧輕便, 一手掌握, 用久手不累
- 採用靜音降噪技術,可享受安靜愜意的放鬆時刻

各部位名稱



包裝清單: Mini筋膜震動按摩槍x1

附件:按摩頭x3,USB充電線x1,收納袋x1,説明書(含保證書)x1

按摩頭

配置三個可更換按摩頭

Mini 通用按摩

通用按摩頭,能更好刺激深層筋膜而且還適合多個肌群!

通用模式,適用所有肌筋膜部位



Mini激痛點按壓頭

Mini激痛點按摩頭能更深入"痛點"並將這些"痛點"逐一化解!

激痛點緩釋專用模式,用於全身激痛點 舒緩按摩。



Mini 阿基里斯按摩

Mini阿基里斯按摩頭能夠充分貼合足踝和跟腱,是運動者特別喜歡的按摩頭。 同時對後頸、肌腱等條形肌的按摩也非常給力!

跟腱踝關節放鬆模式,適用於劇烈 跑跳類運動前後放鬆。



安裝説明

- 1.裝入按摩頭,裝的同時稍微旋轉按摩頭裝入(圖一)
- 2.開啟電源,將底部電源開關撥至 on (圖二)
- 3.短按觸控按鍵 @ 鍵 , 切換段數模式(圖三)
- 4. 關閉電源 將底部電源開關撥至 off (圖二)
- 5.拔出按摩頭,拔的同時稍微旋轉按摩頭拔出,不要直接拔(圖四)



使用説明&充電

- 1)段數模式:開機後顯示O,短按 @ 鍵 啟動,默認1擋;
 - 再短按一下@鍵,2檔;再短按一下按鍵,3檔;
 - 再短按一下 @鍵 ,4檔;再短按一下按鍵,5檔;
 - 再短按一下 @ 鍵 , 進入待機。待機時顯示0。
- 2)任意模式下,長按 @ 鍵 0.5秒進入待機狀態。
- 3)不使用本產品時,請確保電源開關鍵撥到OFF位置,否則會消耗電量。

使用電量顯示:

電量小於10%,紅色燈閃爍;

電量10%-25%, 燈條顯示2格, 綠色燈堂亮;

電量25%-50%, 燈條顯示3格, 綠色燈常亮:

電量50%-75%, 燎條顯示4格. 綠色燈常亮:

電量75%-100%, 燎條顯示5格,綠色燈常亮。

充電顯示

- 1、初次使用之前,先將電充滿。(若產品電量充足,則無需充電)。
- 2、充電時,將提供的充電線插入充電器輸出孔,然後將充電器接入一般家用 插座,另一端接入本產品電池充電孔推行充電。
- 3、電量100%(飽和) 燎條顯示5格,綠色燈至亮;

電量>75%, 燈條顯示5格,第1,2,3,4格燈為綠色常亮,第5格綠色燈閃爍;

電量75%-50%,燈條顯示4格,第1,2,3格燈為綠色常亮,第4格綠色燈閃爍;

電量50%-25%,燈條顯示3格,第1,2格燈為綠色常亮,第3格綠色燈閃爍;

電量25%-10%,燈條顯示2格,第1格紅燈變為綠色常亮,第2格綠色閃爍;

電量<10%,燈條顯示 1格,紅燈閃爍。

4、充電時,本機無法進行操作。

規格

產品尺寸: 137x55x200mm

產品重量:約0.59kg 額定電壓:DC.5V/2A

電池容量: 2400mAh

額定電流:約2000mA

按摩頭:3個不同按摩頭

電池重量:約143q

充電時間:4~6小時

(依充電器電流大小而定)

使用時間:約4~11小時(依使用段數大小而定)

段數選擇:1~5段

清潔及保養方法

機體表面清潔,應用稍微濕一點的濕布擦拭,然後用軟布擦乾,不要用 汽油、去漬油、有腐蝕性的清潔劑或溶劑之類清潔,嚴禁用水沖(淋)洗 應存放於乾燥、通風良好,無腐蝕性氣體的地方,離地距離不小於250mm 堆放層數不超過5層。

長時間不使用應清潔後包裝儲存,每隔3~6個月充電一次。

簡易故障排除

無動作/無顯示

----電源開關是否開啟

電池電力是否耗盡,請充電

以上檢查都正常,機器故障請送回售後服務據點檢測/維修

無法充電

——檢查充電器是否插好,充電孔是否有髒汙或充電器輸出是否正常 以上檢查都正常,機器故障請送回售後服務據點檢測/維修

機器噪音

——機器內有異物請送檢,機器故障請送回售後服務據點檢測/維修

收藏及方法

- 1、外出或長時間不使用本機時,必須關機,否則將影響機器壽命。
- 2、產品收納時請先擦拭乾淨,再收藏,以避免因長期不使用而發黴。 外部再套上塑膠袋,避免灰層進入。
- 3、在存放或出門旅行時,放在提供的包裝中。
- 4、本產品適用於汽車、火車、輪船、飛機運輸方式。
- 5、運輸中應該固定好本產品,防止劇烈振動、碰撞、翻滾和跌落, 並向上、輕放和防雨。

Contents

Important Safety Instruction —————	1
2. Product Feature	2
3. Product Parts	2
4. Massage Head	-3
5. Installation	-4
6. Operation Instruction & Charging — 4	-5
7. Specification ———————	5
8. Cleaning and Maintenance	6
9. Trouble shooting ——————	6
10 Storage	6

Important Safety Instruction

Please carefully read through the safety percussion before using the product.



Do not touch this part when starting the machine with massage head installed.



Do not touch this part when starting the machine without massage head installed.

- 1. Children need to be under supervision of adults to ensure that they do not play with the device.
- 2. This product is not intended for the users (including children) with undeveloped physical
- growth, sensing and mental capacity and those who is lack of experience or knowledge, unless it is safety used under the supervision or guidance of a person responsible for its safety.
- 3. Keep away from liquids or heat sources and keep the vents dust free.
- 4. This massage gun cannot be used during charging.
- 5. Please use this product according to the instructions.
- $\hbox{6.Before use, please carefully check the product function according to the operation manual.}$

Product Features

- 1. Small, but strong power; Lightweight and compact; Easy to use by single hand
- 2. Touch screen button control, lightly touch to freely switch speed modes
- 3. 5 adjustable high percussion frequency up to 3500times/min
- 4. With patented silence and noiseless technology, just include yourself into quite and cozy relaxing hour
- Standard brushless motor with powerful percussion to the deep fascia, to help muscle relaxation and deeply relieve muscle soreness
- 6. 3 massage heads replaceable, soothing muscles in various parts

Product Parts



Packing list: Mini Fascia Percussion Massage Gun Accessories: massage headsx3, USB charge cablex1, satin bagx1 manual instruction (including warranty x1)

Massage Head

3 changeable massage heads equipped

Mini general massage head

Mini general massage head for better fascia stimulation suitable for multiple muscle groups!

General mode suitable for all muscle fascial parts.



Mini trigger points massage head

Mini trigger points massage head for deeper penetration i nto the "Trigger Points" and resolving these "adhesive pain points" one by one!

Dedicated Trigger points release mode for whole body trigger points relieving.



Mini achilles massage head

Mini achilles massage head fit adequately for ankles and chilles tendon, widely affected by exercisers ans practitioners. Well performed in bar muscles massage like hind neck and tendon.

Achilles tendon and ankle joint relaxation mode for relaxation before and after intense jumping and running exercise.



Installation

- 1. While installing, slightly rotate the massage head to load. (Figure 1)
- 2. Turn the power switch to the "ON" position to turn on the device. (Figure 2)
- 3. Press the screen touch button to switch between modes. (Figure 3)
- 4. While pulling, slightly rotate the massage head to pull. Do not pull it out directly. (Figure 4)

(Figure 1)



(Figure 2)



(Figure 3)



(Figure 4)



Operation Instruction & Charging

Instruction

Turn the power switch to the "ON" position, the device stands by Speed mode: Short press the button to turn on, 1st speed by default; short press the button again to enter 2nd speed; short press the button again to enter 3rd speed; short press the button again to enter 4th speed; short press the button again to enter 5th speed.

Operation Instruction & Charging

Battery display

After power on, the battery power is < 10%, the red light is on;

the battery is 10%-25%, the light bar shows 2 grids, green light is always on; the battery is 25%-50%, the light bar shows 3 grids, green light is always on; the battery is 50%-75%, the light bar shows 4 grids, green light is always on; the battery is 75%-100%, the light bar shows 5 grids, green light is always on.

Charging

- 1. Charge the battery before initial use.

 (If the product is sufficiently charged, there is no need for charging).
- When charging, insert the USB cable into the charger plug and connect it to the general household power outlet and connect the other end to the device charging port.
- 3. Battery level displays when charging:

Battery power 100%, the light bar shows 5 grids, green light is always on; **Battery power> 75%**, the light bar shows 5 grids, the 1st, 2nd, 3rd, 4th grid are always on, the 5th grid is flashing;

Battery power 50%-75%, the light bar shows 4 grids, the 1st, 2nd, 3rd grid are always on, the 4th grid is flashing;

Battery power 25%-50%, the light bar shows 3grids, the 1st and 2nd grid are always on, the 3rd grid is flashing:

Battery power 10%-25%, the light bar shows 2grids, the 1st grid is always on, the 2nd grid is flashing;

Battery power less than 10%, the light bar shows 1 grid, red light flashing.

4. The device cannot be started up while charging.

Specification

Product Weight: about 0.59kg Rated Voltage: 5V-2A

Battery Volume: 2400mAh
Rated current: about 2000mA

Massage heads: 3 different massage heads

Massage heads: 3 different massage in Battery Weight: around 143g Charging time: around 4~6 hours Discharging time: around 4~11 hours

5 Speeds adjustable

Clean and Maintenance

Make Sure to switch off power and pull out the power plug before cleaning.

- Clean up the surface of the device body. Wipe it with slightly wet cloth and dry with a soft cloth. Do Not clean with gasoline, cleaning naphtha, corrosive cleansing agents or solvents. Do Not flush (leach) with water.
- Stored in a dry, well ventilated place with non-corrosive gas and no less than 250mm from the ground. The number of stacking layers does not exceed 5 layers.
- 3. If not in use for a long time, store in the package after cleaning and charge every six months.

Trouble shooting

No action

-Please check if the power switch is turned on.

Machine noise

-If there is foreign object or malfunction, please inspect it.

No screen display

-Please inspect the machine if there is malfunction

No charging

-Please check if the adaptor is plugged in properly and charging port is dirty.

Storage

- When you go out or do not use the device for a long time, please switch off power to maintain product lifespan.
- Please clean the device before storing to prevent mildew from non-using for a long time.Put on a plastic bag to prevent dust from entering.
- 3. Stored in the package provided when storing or traveling.
- 4. This product is suitable for car, train, ship and aircraft transport.
- 5. This product must be fixed during the transit to prevent severe vibration, collision, roll and fall and place it upward lightly and somewhere rainproof.

非常感謝您:

承蒙惠購本產品,本公司除表達最高謝意外,並將本著一貫的服務精神,隨時為你提供最佳服務, 在你使用前務請詳閱本說明書,並依正確方法使用,閱讀完畢後請妥為保管,以備日後使用參考。

商品保證書

機型:BPB-M07HU 購買日期: 年 月 日

顧客	姓名	電話:
	地址	
經銷商		

- 一.上列保證書應確實填寫,並蓋有經銷商店章始為有效。
- 二免費服務年限為一年,自購買日起一年內,在正常使用下,如發生故障,則免費維修,但 人為或天災地變或蟲害,不在此限。(如需服務換修零件,則按本公司服務規定,收取維修 費)。
- 三.收費服務年限為兩年,收費服務兩年內,如需維修則按本公司服務規定,收取維修費。
- 四.免費再延長6個月保固:請即刻上本公司網站:http://wonder.tw 登錄購買的產品。

網路登錄產品註冊【需先加入旺德會員】,註冊成功該產品既享有延長保固6個月時間。 本公司網站另有多項優惠與服務,敬請多加利用。

- 五. 自然耗材不在保固範圍內(例:電池、充電電池、天線、磁頭、雷射頭、耳機、遙控器、信號線、燈泡、刀具組、纏網、線材與隨機附贈之軟體及其他配件…等)。
- 六、本保證書遺失恕不補發,但如需服務,則依出廠日期,計算保證年度。
- 七.本商品無外修服務,如有另行約定則外出檢修費,依本公司規定收取;若發生故障請送回 原購買經銷商或親治本公司所屬營業所。
- 八.本商品維修範圍僅於"台、澎、金、馬"(需付擔一趟郵資),其餘地區請自付來回郵資。
- 九.MP3、音響…等產品送修時,內存的資料(數位,類比)有可能流失,建議送修前請先行備份 ,若有資料遺失之情形,本公司將不負仟何賠償責任,郵寄維修視同同意本條款。
- 十.本商品使用於營利商業用時,其保證期限按保證書所載期限減半保固。

宣告:

説明書業經仔細檢查及檢對,但仍不排除文字拼寫及技術錯誤之可能,此種錯誤或疏漏將於 新版予以修正。本手冊之全部內容,本公司享有隨時修改之權利,且不另行通知。

消費者專線及售後服務據點

台北 (02)8990-4440 新北市五股區五工三路116巷6號 台中 (04)2479-0960 台中市南屯區黎明路一段533號 高雄 (07)371-4688 高雄 市仁 武區 仁雄 路 9 6 號

雲製/進□商 旺德電通股份有限公司

新北市五股區五工三路116巷6號 服務專線:(02)8990-4440 http://wonder.tw E-mail:service1@wonder.tw