

**BLAUPUNKT**

## User's Guide

### Mobile phone FS 04



*Enjoy it.*

## Table of contents

General Information .....	1
1. Safety .....	1
2. Product specifications .....	7
3. About the keys .....	8
4. Getting Started.....	9
4.1. <i>Insert a SIM card</i> .....	9
4.2. <i>Insert a memory card</i> .....	9
4.3. <i>Insert battery</i> .....	10
4.4. <i>Remove the battery</i> .....	10
4.5. <i>Charging the battery</i> .....	10
4.6. <i>Maintaining the battery</i> .....	11
5. Power On/Off .....	12
6. Call functions .....	12
6.1. <i>Make a call</i> .....	13
6.2. <i>Receive call</i> .....	13
6.3. <i>Available functions during call</i> .....	14
6.4. <i>Emergency call</i> .....	15
7. Messages.....	15
7.1. <i>Write a message</i> .....	15
7.2. <i>Incoming messages</i> .....	16
7.3. <i>Drafts</i> .....	17
7.4. <i>Outbox</i> .....	17
7.5. <i>Sent messages</i> .....	17
7.6. <i>SMS settings</i> .....	17
8. Log .....	18
8.1. <i>Call logs</i> .....	18
8.2. <i>Call settings</i> .....	18
9. Phonebook .....	19
9.1. <i>Add new contact</i> .....	20
9.2. <i>Search and view a contact</i> .....	20

10. Camera .....	22
11. Multimedia.....	22
11.1. <i>Image viewer</i> .....	22
11.2. <i>Video recorder</i> .....	23
11.3. <i>Video player</i> .....	23
11.4. <i>Music player</i> .....	24
11.5. <i>Sound recorder</i> .....	24
11.6. <i>FM radio</i> .....	25
12. Organizer .....	25
12.1. <i>Calendar</i> .....	25
12.2. <i>Alarm</i> .....	25
12.3. <i>Worldclock</i> .....	26
12.4. <i>Electric torch</i> .....	26
12.5. <i>Calculator</i> .....	27
13. File manager .....	27
14. Settings.....	28
14.1. <i>Profiles</i> .....	28
14.2. <i>Phone settings</i> .....	29
14.3. <i>Security settings</i> .....	30
14.4. <i>Connectivity</i> .....	31
14.5. <i>Restore factory settings</i> .....	31
15. Shortcuts .....	31
16. Declaration of Conformity .....	32

## General Information

Thank you for choosing our device. This manual contains general information, in addition to the information required for operation.

Note:

- For your safety, use only accessories approved by the manufacturer. Use of unapproved accessories may result in a warranty revocation.
- If the device that appears in this manual does not match your device, rely on the information displayed on the device. The manufacturer reserves the right to change the operation of the device without prior notice.

The manufacturer reserves the right to change the operating instructions as well.

## 1. Safety

### Safety regulations

Please read the safety instructions carefully, as ignoring it may be dangerous or illegal.

The owner of the device is responsible for the use of this appliance. Do not switch on the device, where it is prohibited to use a mobile phone or to interfere with radio waves.

### Airplane

When traveling via airplane, your device must be switched off whenever the crew or warning signals are instructed to do so.

Using a mobile phone may be dangerous to the operation of the aircraft and may interfere with network communication. Use of the device despite the ban may have legal consequences.

### Explosion hazards and restricted areas

Turn off the device in explosion hazardous areas. Sparks in such places may lead to an explosion or fire that may result in serious injury or death. Turn off the device at gasoline or gas filling stations, especially near the fuel pumps. Follow the instructions strictly in locations such as fuel tanks, chemical plants, and explosive substances.

### Electronic devices

To avoid demagnetisation, do not leave your device for a long time close to electronic devices.

### Electrical medical devices

Your phone is a radio transmitter that can interfere with electronic medical devices or implants such as hearing aids, pacemakers, insulin pumps, and so on. operation. We recommend that you keep a distance of at least 15 cm between the implant and the device, never wear your phone in the breast pocket. Follow the instructions of the manufacturer of the medical device. If you have a medical implant and have any other questions about using mobile or wireless devices, ask your doctor.

### Use in hospitals

Hospitals and other healthcare facilities can use devices that are particularly sensitive to RF signals. Switch off your phone if prohibited signals are instructed to do so, or hospital staff

ask for it.

### Road safety

Observe the local laws and regulations regarding smartphone usage while driving. If you make a phone call while driving, observe the following rules: Focus on driving to become aware of traffic conditions; If the device has a hands-free function, use handsfree. If the traffic situation requires, stop the car before you pick up the phone.

### Use environment

The device complies with the recommended emission values for radio waves when kept at a minimum distance of 1.5 cm from the ear. When carrying the phone in a case, belt clip or holder, make sure that it does not contain metal and that the phone is slightly distracted from the body. When using other accessories, it is not possible to operate in accordance with radio frequency guidelines. If you do not use a case and do not hold the phone on your ear, keep it at least 2.5 cm away from your body, especially during data transfer.

### Note on using this unit

- Do not place the device close to magnetic cards or other magnetic devices. The phone's magnetism can erase the data found on the disc on the card.
- Wired telephone, television, radio may cause interference and may affect the operation of the mobile phone.
- Keep the appliance dry, all moisture may damage the electrical circuits.
- Keep the unit away from extreme temperature

conditions.

- Keep the appliance away from places where the temperature can reach 60 ° C, such as dashboard, window sill, fire, burning cigarette.
- Do not paint the appliance.
- Do not shake the appliance, do not drop it or crush it.
- Do not disassemble or modify the phone as this may damage the phone, which may cause leakage, which interrupts the internal circuits.
- Clean only the phone with a damp or non-static cloth. Do not use alcohol, thinner, benzine or other chemical, scouring agent to clean the appliance.
- The product may become warm during normal use or during charging. Ne hagyja a készüléket hosszú időre lemerült akkumulátorral, mert adatvesztést okozhat.
- Metal parts of the device may cause skin irritation.
- Do not put the device in the back pocket if it is damaged, damaging the phone. Do not put the device in the bottom of the bag as it may break.
- If the phone is in vibrating mode, place it in a place where it can not fall off during vibration.
- Do not press the display with a needle or other sharp object, as it may damage the LCD display, which will give you a surplus.
- Store the device in an appropriate location when not in use. Keep away from children.
- If you lose or steal your device, contact your network

service provider immediately to prevent the SIM card from being used by unauthorized persons. The service provider may ask for the IMEI number of the device that you can find on the battery sticker or by dialing the code \*#06#. Record this number if you need it in the future.

- To prevent unauthorized use, lock the SIM card or the device, change the passwords if necessary.
- Always switch off the appliance before removing the battery. Otherwise, it may cause data loss.
- When leaving your vehicle, carry the appliance or put it in the glove compartment to prevent theft.
- Keep the device, battery, and charger away from children.

#### Notes on using the battery

- Do not disassemble or modify the battery as this may cause leakage, overheating, or explosion.
- Do not dispose of the battery in a fire as it may cause an explosion. Dispose of the old battery according to local regulations. Do not throw it into household rubbish.
- Do not short circuit the battery circuits with a needle or other metal object as it may cause leakage, overheating or explosion.
- If the battery is exposed to a liquid, it may cause blindness. If this happens, do not rub your eyes, but rinse with water and seek medical attention immediately.
- If the liquid spilled from the battery contacts skin, burns the skin. Wash your skin with clean water and consult a



physician immediately.

- Do not take the battery in your mouth as it may be poisonous.
- Do not continue to use the battery if it feels too hot or has changed its color or shape.
- Keep the battery dry.
- Do not store the battery near fire or other hot places. Store the battery in a cool, well-ventilated area and do not expose it to direct sunlight.
- Do not charge the battery for more than 24 hours.
- The battery can be charged for hundreds of times, but each charge will shorten its life and wear out after a while.
- When replacing a battery, use only a battery approved by the manufacturer. Using an incorrect battery may result in a warranty.

### Qualified service

The product can only be repaired by a qualified person.

### Hearing protection

To avoid hearing loss, do not listen to music or radio for a long time at high volume.

### Water resistance

The appliance is not waterproof, so keep it dry.

## 2. Product specifications

### Power Supply Features:

- Input: (AC), 100-240 V- 50/60 Hz – 0.1 A
- Output: (DC), 5 V- 500 mA

### Battery Type and Voltage:

- Li-ion battery, 3.7 V, 600 mAh

### Network type:

- GSM 900/1800 MHz

### SAR values:

- 1.133 W/Kg (Head)
- 0.789 W/Kg (Body)

Note: Actual operating conditions depend on local conditions, network environment, and user habits.

The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an 'on/off' facility.

## 3. About the keys

**1. Left soft key / Right Soft key:** Opens the menu item in the left / right corner of the screen.

**2. Dial key:** dial / answer the call and in standby mode, open the call list.

**3. End / Off Power Button:** Press and hold to turn the power on and off; briefly press it down, reject a call, or quit it from the menu.

**4. Ok key:** press to execute the indicated function. In standby mode, press to open the selected link.

**5. Navigation keys:** Press up / down / left / right directions to scroll through the menu. In standby mode, press the up / down / left / right arrows to access the quick menu at the top of the screen and press OK to execute.

**6. 0-9 alphanumeric keypad:** Press the corresponding keys to enter numbers when dialing or the characters of the numbers when writing text.

Press \* twice to display "+" the international developer signal.

**7. \* (Star) button:** in standby mode press and hold \* to display the international prefix '+'. In Menu mode, briefly press to lock the keypad.

**8. # (Dual Cross) button:** in standby mode, press and hold to activate / deactivate Silent mode.

## 4. Getting Started

### 4.1. Insert a SIM card

To use your phone, you need to insert a valid SIM card to connect to the GSM network.

To avoid missing or damaged the contents of the SIM card, please DO NOT hold the metal part of the SIM card with your hands free and keep it away from electromagnetic devices. If the SIM card is damaged, it can not be connected to the GSM network. Before inserting or removing the SIM card, make sure that the device is turned off and removed from the back of the device.

Note: Locate the SIM card slot on the back of the device and in the direction of the signal, with the collisions slide the card.

### 4.2. Insert a memory card

The memory card is not part of the basic package, but the memory of the device can be expanded with an SD card. Please make sure that the memory card is inserted correctly before use.

Note that the device may shake, the memory card may slide out of the slot, so please do not bend it, scratch the memory card or expose it to static electricity or dust, do not immerse it in water. Place the memory card in the slot on the back of the machine, with a chip down, as shown on the device.

Please be careful when using a memory card, especially when it is removed. Some memory cards must be formatted with a computer before use.

### **4.3. Insert battery**

1. Insert the battery chip into the protruding metal point in the battery slot, insert the battery, and push the top down until the battery engages in the recess.
2. Put back the back cover.

### **4.4. Remove the battery**

To remove the battery, turn off the device, remove the cover, and then remove the battery at the top.

Note:

Please remove the battery when it is switched off, as it may cause abnormal operation when the skin is switched on.

### **4.5. Charging the battery**

Connect the charger to the appliance and plug the other end into the socket. If the device is turned on while charging, the battery icon will move in the right corner of the display. Charging is completed when the charging indicator on the top right is lit. If charging is switched off, a charging indicator appears on the display. When charging is complete, unplug the charger from the unit.

Note: When the battery voltage is low, a warning message is displayed on the display. Charge the battery as soon as you can, to avoid any inconvenience, the device can be switched off during a telephone conversation. Your device can automatically turn off when the power level is too low.

1. If you use the battery at a persistently low charge, it may adversely affect the battery life and quality.
2. Use only the charger approved by the manufacturer for proper operation.
3. Do not remove the battery during charging.
4. Fill the unit for at least 4 hours before first use. This can increase the efficiency of the multiple charge and discharge cycles.

## **4.6. Maintaining the battery**

The device has a rechargeable battery. When not using the charger, disconnect it from the power source. For more than a week, do not leave the phone charging. Temperature influences battery capacity. Battery may need to be cooled or warmed up before charging. If the battery temperature is lower than 0 ° C or higher than 45 ° C, do not charge the battery. Use the battery according to its intended purpose. Do not short-circuit the battery terminals. Do not use a damaged battery. If you are using an appliance under extreme temperature conditions, the battery will not work properly and its life span will be reduced. DO NOT throw the battery into fire, follow local laws and regulations regarding the disposal of the spent battery.

## 5. Power On/Off

Press and hold the End / On-Off button to turn the unit on or off.

1. If a SIM card is not inserted, it is defective or not fit correctly, a warning message will be displayed after switching on the display. Turn off your readiness and make sure the SIM card is inserted correctly.
2. If you insert the SIM card into the device, the PIN request and the phone password are active, the device prompts you for the password and PIN code then switches to standby mode.

After switching on, the phone automatically searches for the network. If the device has found the allowed network, it will display its name and signal strength.

If your device does not find a suitable network, you can only make an emergency call or access non-network services on your phone

## 6. Call functions

If you have completed the steps in the previous chapter, the machine is ready to make and receive calls. For more information about call origination and basic call functions, see this chapter.

Note:

If you are using a headset, gently insert and unplug the jack plug to avoid possible injury.

## 6.1. Make a call

When the network service provider name appears on the display, the phone is ready to make and receive calls.

### Direct calling

In Standby mode, press the number keys to enter the number you want to call, press the right soft key to clear the wrong numbers, press the left soft key or the dial key to start the call if the specified number is correct.

To enter an international phone number format, press and hold the [\*] key until "+" international call sign appears on the display.

### Dialing from Names

Use the right soft key to enter Names. Use the navigation keys to scroll to the contact you want to dial, then press the call key or Options (soft key left)> Call.

## 6.2. Receive call

When an incoming call is alerted to your device if your service provider supports the number display, the display shows the caller's number or the caller's name (depending on whether you have saved it in the phone book).

1. Press the dial key or the left soft key and answer [Answer] to the incoming call.
2. If **Any key** responds function is active, [Settings / Call Settings / Answer Mode / Anykey], you can answer any call using any key except the Right softkey and the End / Off button.
3. When the headset is connected to the unit and [Headset]



is activated [Settings / Call settings / Answering mode / Automatic receiving in headset mode], incoming calls will be automatically received by your phone after 5 seconds of vibration or ringing.

4. If you do not want to answer the call, press the End / Off button to reject the call.

The End / Off button can also be used to disconnect the call.

5. During a call, press the down / up navigation keys to reduce or increase the loudspeaker volume.

### **6.3. Available functions during call**

Press <Menu> (left) to select from the following options during a call:

- Hold / No hold
- End call
- Phonebook- Open a phonebook during a call
- Call list- to open call logs during a call
- Messages- Open messages during a call
- Start recording- Record the ongoing call
- Mute
- Volume- to decrease or increase the volume in the call

You can navigate through the available menu items on the screen with the navigation key.

To end the call, press the end call key, or select Options> End call.

## 6.4. Emergency call

You can immediately make an emergency call without a SIM card. Different networks can use different emergency numbers, so please contact your network operator.

# 7. Messages

Message service is a network-dependent service that allows you to send and receive SMS. For more information, contact your network provider.

## 7.1. Write a message

Features: Write new message, Inbox, Drafts, Outbox, Sent items, SMS settings.

In Menu mode, select Messages> Write message.

Note: To send the SMS, you must have the correct message center number from your network service provider. You can check and change the message center in Menu> Messaging> SMS settings> SIM> SMSC adress.

While writing a message, press # to switch between input modes.

Press the left soft key [Options] during message editing to access the following functions:

- **Send to:** You can specify the recipient of the message manually or select it from Names.
- **Input Mode:** Displays the Available Input Modes list.
- **Advanced:** Insert phone number, Insert name, Insert smiley
- **Save:** Save a message to drafts

## Sending

After Adding a Recipient (which you can do by entering a direct phone number or from Contacts), you can send the message by selecting <Options> Send.

## **7.2. Incoming messages**

You can store received messages on your device or on the SIM card and access it.

When you receive a message, a beep or vibration (as previously configured in the menu) will alert you to this, or a graphic will appear on the display. Press the left soft key [View] or OK to view the message, and the right soft key to return to the SMS menu to read other incoming messages.

If the SMS memory is full, you will see a "Memory full" indicator on the display and the SMS icon flashes. Before you can receive a message, delete some of the older ones. If the size of the new message exceeds the capacity of incoming messages, the information may be lost or incomplete.

In the message list, press the left soft key [View] to view the message. Press the left soft key [Options] repeatedly to select:

- Answer: You can reply directly to the message.
- Sender's Call: Call the sender directly.
- Forward: Forward a message to another recipient.
- Delete: Deletes the message
- Special / Use Number: If the message contains a phone number you can choose from the following options:
  - Call: Call the phone number in the message
  - Save to phonebook: You can create a new contact with the phone number

### **7.3. Drafts**

You can view messages in the unfinished (While Writing Message: Options / Save) messages in this folder.

### **7.4. Outbox**

When [Save and send] is activated, unanswered messages are saved in this folder.

In the messages list, press the View soft key (left soft key) to read the selected message.

### **7.5. Sent messages**

If the message is sent, the sent message is saved in the Sent Items folder.

### **7.6. SMS settings**

You can change and save the parameters of the SMS service on the SIM card: In the SIM menu you can:

- Message Sender Center address (Message Number),
- Delivery report in case of sending a message (Handed / On)

To validate the changes, press the left soft key [Options] and then (Save)

To save outgoing SMSs, you can activate the SMS settings / SMS save / On option.

## 8. Log

### 8.1. Call logs

In Menu mode, select Call Logs to access the Missed, Dialed, Received, All Calls list.

Delete call logs: Use this option to clear the call details of a given menu item or all the lists at a time.

Missed calls, Dialed numbers, Received calls list, the following options are available:

- View- view the details of a call.
- Call- to call a specific number
- Send a text message - Send a text message to the selected phone number.
- Save to phonebook- Add phone number to Contacts.
- Add to blacklist- block phone calls.
- Delete- Deletes a specific item from the list

In Call timers, you can view the duration of the call by type and in total.

### 8.2. Call settings

You can choose the following options:

· **Call Waiting** (Depends on network support): Turn on or off or check the Call Waiting status.

When the phone is switched on, an alert is heard during a call if someone else calls and the caller's number or name is displayed (depending on whether you have saved it in the phone book).

· **Call divert** (depends on network support): Divert incoming voice calls to voicemail or other phone numbers, depending

on the setting. Divert may be unconditional [All voice divert redirection] or conditional (Divert if not available; Divert if no answer; Divert if busy). Use the up / down navigation keys to select the appropriate divert type from the list, press Ok or Left soft key [OK] to select one of the following options:

**Activate:** Forward to a new number or Voicemail (by type) for an incoming call:

- **New number:** Use the up / down navigation key to select this line, then press the left soft key or OK. Enter the full phone number to which you want to divert incoming calls.

- **Voice Mail:** If you have a voicemail, pressing the OK or Left soft key [OK] will cause the conditional or unconditional redirection to the voicemail if you have previously set your voicemail number in Menu> Messaging> SMS Settings> SIM> Voice Mail Server.

**Answer mode:** In this menu option you can set the call to answer by pressing any key or make a call with a 5 second delay when a headset is connected.

## 9. Phonebook

In Standby mode, use the right soft key to enter Names or to access Menu> Phonebook.

Press the left soft key [Options] to access the menu function.

You can save the numbers and names you frequently use to the SIM card and the device in two places. The number of contacts that can be stored on the SIM card depends on the card's capacity. You can store up to 100 contacts in the phone memory. When you enter the phonebook, you can view all

the contacts (stored on the SIM card and on your device).

Various icons indicate which contact is saved for which storage.

You can search for that contact by entering the first letter of the contact.

After searching for a contact, you can dial the number by pressing the Dial button and disconnecting the line by pressing the end / Off button.

### **9.1. Add new contact**

In Standby mode, enter the phone number and select (left) Options> Save to Phonebook.

Select storage space (SIM1, SIM2, or Phone) to save the phone number.

Enter contact details: name, phone number.

To save, press the Options (left) soft key and select Save.

### **9.2. Search and view a contact**

- In standby mode, select the <Names> (right) soft key and select the desired contact using the navigation keys.
- In Menu mode, enter the Phonebook menu and enter the first letter of the contact you are looking for in the search box. Select a name from the hit list.

If you find a contact you are looking for, you can choose from the following options (only available after opening a contact):

- View: View contact information
- Send text message - Send a text message to the selected phone number
- Call- to dial the selected number.
- Edit- to edit the selected contact.
- Delete- to delete the selected contact.
- Copy- to copy the contact to the SIM card or phone memory.
- Select more: Tick the selected contacts and send them to SMS or delete the marked ones.
- Settings

Fixed dialing: Set a fixed call (if the network service provider supports the feature).

Memory status: view the number of contacts stored on the device and the SIM card, and how many contacts can be stored. The storage capacity of the SIM card may vary by card type.



## 10. Camera

Your device has a camera for taking photos. To store images, you need a memory card.

In Photo Preview mode, you can choose from the following options by pressing Options (left soft key) in the popup window:

- Switch to camcorder: to enter video capture mode.
- Photos: Opens saved photos.
- Settings: Use the up / down navigation keys to scroll through the Flip Guard, Scene Mode, White Balance, Self-timer functions. To select, press Options (left soft key) Select. To save the changes, press Save.
- Image Settings: In this menu, you can adjust the image size and picture quality.

## 11. Multimedia

### 11.1. Image viewer

Attention! Insert the memory card to use the menu item.

In this menu, you can view the images saved on the memory card, press OK in the selected image, then Options (left soft key) to access the following functions.

- View: view the selected image.
- Send: You can send the image via Bluetooth.
- Use differently: set photos as wallpaper.
- Rename: You can change the name of the image.
- Delete: Deletes the current image.
- Mass Storage: Displays the list of images on the memory

card.

- Image information: Here you can see the details of a picture such as: resolution, size, creation time

## 11.2. Video recorder

Insert a memory card to make a video recording. In Video Preview mode, press Options (left soft key) to access the following actions:

- Switch to camera: switches to camera mode.
- Settings: Press the left / right navigation keys to set the anti-flip settings.
- Video settings: In this menu, you can adjust the video quality.

Press the center navigation key to capture the video, press the same button to pause or resume recording; a Right softkey [Stop] can stop recording. Your device will display a warning message about saving the video and then return to the video preview mode so that you can take another shot.

Reset default settings: reset parameters to default.

## 11.3. Video player

This menu item allows you to play video clips stored on a memory card.

Press Options (left soft key) to access the following functions on the selected video:

- Playback: Plays the video, press OK (Center Navigation) again to start it.
- Send: You can send the video via Bluetooth.
- Rename: You can change the name of the video.
- Delete: Deletes the selected video.

## 11.4. Music player

On the player interface, press OK to select / play / pause the left / right navigation buttons to go to the previous / next / audio file, the up / down navigation buttons to adjust the volume.

Using the left soft key [List] you can enter the playlist by pressing the left soft key [Options] again to access the player program: play, details, update the list, settings.

In Settings, you can set repeating, mixing numbers, playing backgrounds.

## 11.5. Sound recorder

You can use voice recorder to record telephone conversations and make other voice recordings.

Select "New Entry" with the left soft key to start or pause the recording and stop the right soft key. The unit saves the recording to which a warning message appears on the display.

After recording, you can access the following options by pressing the Left soft key [Options].

- New entry: Create a new recording.
- Playback: you can retrieve the current recording.
- List: To view the list of recordings, use the Options (left soft key) to select from the following options:
  - Playback: Play back the current recording
  - Rename: You can change the recording name.
  - Delete: Deletes the selected recording.
  - Send: You can send the video via Bluetooth.

## 11.6. FM radio

In Menu mode, go to Multimedia> FM radio. To connect to a radio, connect the headset, which acts as an antenna. If you do not connect a headset to your device, you may not be able to receive radio reception or in very poor quality.

In the FM radio application, press the left / right navigation keys to search the channels automatically forwards / backwards. Use the up / down navigation keys to adjust the volume.

Note: 1. If the Playback in background feature is active, you can also listen to the radio in standby or menu mode. You can also listen to the radio with handsfree, but do not remove the headset.

2. The quality of radio broadcasting is influenced by the environment. You can improve the quality by manual search and by placing your device closer to the window.

## 12. Organizer

### 12.1. Calendar

To open Calendar- in menu mode- go to Organizer> Calendar. The calendar indicates the current month, highlighting the current date with color. Use the navigation keys to scroll through the days. Select a date and press OK or the left soft key [Options] to choose from: Go to date, Go to today, Start of week.

### 12.2. Alarm

In Menu mode, go to the Organizer> Alarm menu, where you can set 5 different alarms. The wake-up function also works

when the device is switched off.

When the alarm clock sounds, press the Left soft key or the Stop button to stop; press the Right soft key to the snooze.

To change the alarm details, select one from the list and press the left soft key [Alarm]:

1. Enable / disable the alarm by ticking out and on. When an alarm is active, you will see a green dot before "On". In the alarm clock list, the active alarms are indicated by a check mark.

2. To change the alarm time (Time), scroll with the navigation keys (up and down) and use the numeric keypad to enter the alarm / alarm time.

3. Use the down / up navigation buttons to edit the Repeat Time to set the days of the week to activate the alarm. Press the left soft key [Options] or OK to choose whether your device will only ring once, daily or on the marked days (Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday) at the given time.

4. Select the alarm tone line to change the alarm sound. Press the left soft key [Options] or OK to display the list of ringtones, press the Down / Up navigation keys to scroll through the list and listen to the alarm sound, press the left soft key [OK] or OK to activate the selected sound.

### **12.3. Worldclock**

To open World clock- in menu mode- go to Organizer> World clock, where you can select different time zones.

### **12.4. Electric torch**

To turn on the flashlight- in menu mode- go to Organizer> Electric torch. Use the up / down navigation keys to select [OK]

with the OK button or press the left softkey.

## 12.5. Calculator

In Menu mode, go to Extras> Calculator to open the calculator. The calculator in the machine can perform the 4 basic operations.

## 13. File manager

In Menu mode, go to File manager. You can view all or the free storage of the memory card (if it is connected to a memory card). To view the files, select your device or memory card using the navigation keys, then go to the Options (left soft key) menu and select Open.

- New Folder: Create a new directory on the current drive.
- Rename: You can change the name of the file or directory depending on which one is selected.
- Delete: Deletes the selected library or file, depending on which one you chose.
- Copy: You can copy the selected file to the selected folder with options / answers.
- Move: Moves the selected file (erased from the original location) to the selected folder with options / answers.
- Details: See the file size and date information.

## 14. Settings

### 14.1. Profiles

#### Silent mode

To activate the Silent mode, press and hold #. Press the # button repeatedly to activate General Mode.

#### Customize profiles

In Menu mode, go to the Settings / User Profiles menu, and then select the profile you want to change. There are 4 profiles in the device: General, Low, Meeting, Outdoor.

To change the profile, press [Options] and select Personalize. In this menu, you can change the following settings: alert type, ring type, ringing tone for calls and messages, ring volume, keypad sound.

In the Restore menu, you can reset the factory defaults for the profile.

#### Add a ringtone from a memory card

In Menu mode, go to User Profiles> Options> Personalization> Incoming Call, and then select Select from File.

Then, the device enters the File Manager where you can select from the music stored on the memory card (if there is a memory card in the device) by pressing the OK soft key.

## 14.2. Phone settings

You can change the following in the **Date and Time** submenu:

- **Reset Location:** You can select the capital of the country where you live.
- **Set date and time:** Use the navigation keys to highlight the line you want to set, and then use the numeric keypad to enter the time and date. To save, press Save (left soft key).
- **Enter Format:** You can set the time and date format.
- **Update with time zone:** Select this option and you can enable and update the update with time zone.

**Language:** You can select the language you want to use

**Preferred input methods:** You can edit your keyboard input method according to your custom.

**Display settings:** You can customize the display according to your taste.

- **Wallpaper:** Choose a wallpaper for your phone from pre-installed wallpapers (System) or from your own files (Custom); this picture is displayed in standby mode.
- **Auto. Keypad lock:** this menu option allows you to set how long the keypad will close: 15 sec; 1 minute; 5 minutes or in the same menu item to turn off the function. To lock the keypad, press  $\sim$  \* in Menu mode. To unlock, press the left soft key and then \*.
- **On On:** You can set an animation that appears when you turn on the power on the memory card.
- **Display Off:** You can animate an animation from the memory card when it is turned off.
- **Show date / time:** You can set whether the date and time should be displayed on the display in standby mode.



## Flying mode

In this menu item, you can turn the flying mode on and off. The flying mode turns off all network functions

### Various settings:

- LCD Backlight: You can set the display backlight time and brightness.

## 14.3. Security settings

### SIM security (PIN)

PIN code: Protects your SIM card against unauthorized use. In Menu> Settings> Security Settings, you can turn the PIN lock on or off and change the PIN code.

\* Note: If you enter an invalid PIN three times in succession, the SIM card will be locked, and you will need to have the SIM card PUK code unlocked. The PIN and PUK codes are supplied with your SIM card, provided by the network service provider.  
PIN2 code: You can use the PIN2 code to access advanced features (if supported by your service provider).

\* Note: If you enter an invalid PIN2 code three times in a row, the PIN2 code will be locked and you will need the PUK2 code to unlock the PIN2 code. If not, contact your network operator.

### Phone lock

Menu> Settings> Security settings> Phone security> Phone lock allows you to password protect your device against unauthorized users.

To activate the phone lock, you must enter the phone password. If this feature is active, the phone password must be entered every time you turn it on. Note: The default phone password is 1122. Please change this to a unique code as

soon as possible: to change the code in Menu> Settings> Security Settings> Phone Security> Change password. The specified code may consist of 4 to 8 digits.

#### **14.4. Connectivity**

This menu option allows you to modify your Bluetooth settings. To activate Bluetooth- in menu mode, go to Settings> Connectivity> Bluetooth. You can make the following settings in the menu item: Bluetooth On / Off, visibility, connect to another device [My device], change device name.

#### **14.5. Restore factory settings**

To reset the factory settings (delete all user data from the device) In Menu mode, go to Settings> Restore factory settings. Factory password required for restoration: 1122. Attention! All user data is deleted from the device, deletion can not be undone.

## **15. Shortcuts**

In the standby mode, press the navigation key up. A quick menu appears and you can access the point by pressing the numeric keypad.

To set up: Menu> Shortcut menu, press Options to select one of the following options:

- Add (add new function)
- Edit (Edit the given point)
- Delete (delete a shortcut menu)
- Delete all
- Change order

## 16. Declaration of Conformity

The Blaupunkt FS 04 is compliant with the essential requirements and relevant provisions of RoHS Directive 2014/53 / EU and 2011/65 / EU. The Declaration of Conformity is available on our website.



Designed and Engineered by  
Blaupunkt Competence Center Mobile Europe  
HTM Mobile Kft.

1118 Budapest, Dayka Gábor utca 3. Hungary

Assembled in P.R.C by

CSM Technology Co., Ltd.

5F, Bld. C, Hongshengyuan Industrial Park, Longgang District,  
Shenzhen, China

For more information on this product, visit our website at  
[www.htmmobile.hu](http://www.htmmobile.hu) or [www.blaupunkt.com](http://www.blaupunkt.com).