

使用說明書

User Manual

BPH-V03M



Enjoy it.

目錄

1. 重要的安全說明.....2
2. 產品部件名稱及示意圖.....3
3. 產品技術參數.....3
4. 整機的操作說明.....4
5. 清潔和保養.....5
6. 機器清潔.....6
7. 常見故障排除.....6

免責聲明

● 聲明：

本手冊經仔細檢查及校對，但仍不排除文字拼寫及技術錯誤之可能，若因錯誤導致與實機不符時，以實機為準，此種錯誤或疏漏不能當呈堂的依據，其將於新版予以修正。

本手冊之全部內容，本公司享有隨時修改之權力，且不另行通知。


重要的安全說明

使用本產品時，請遵循如下基本警告：

任何時候都不可用眼睛直視點亮著的UV燈管，以免受傷

1. UV紫外線會傷害人和動物的皮膚和眼睛，請勿直接照射人體、植物、動物。
2. 對所照射滅菌淨化消毒的物體先進行局部測試，以避免光敏感物或無抗UV物受損。
3. 請不要故意破壞產品底部的滾輪（安全開關）以致UV燈失去保護。
4. 請不要故意觸摸手持吸塵器的導電母插以免有觸電風險。
5. 當不使用時或清潔保養之前，請拔掉電源。
6. 為了降低電擊的危險，不要在戶外或潮濕的地表使用。
7. 請按本說明書使用。僅僅使用本說明書推薦的功能。
8. 當插頭或者電源線損壞時，請立即停止使用。當產品出現跌落、損壞、放在戶外或者掉入水裡，出現不能工作，請送往服務部加以維修。
9. 本產品用於一般家庭使用，請不要用於商業或者其他用途。
10. 儘量不要吸玻璃渣、螺釘等尖銳硬物，以及建築垃圾等，避免損傷機器。
11. 不要將電源線做手柄更嚴禁拉扯電源線時緊挨著鋒利的邊緣。也不要將吸塵器放置於熱的表面。
12. 當任何風道堵塞時，不要使用。否則會損壞電機。保存時，遠離灰塵、棉絨、毛髮和任何可能堵塞降低風量的東西。
13. 毛髮、衣物、手機和身體的任何部位請遠離吸塵器的開孔及活動的零件部分。
14. 在拔電源插頭之前，請先關閉機器開關。
15. 接附件之前，請斷開機器電源。
16. 不要吸附任何正在燃燒的或者冒煙的物體。例如煙頭、火柴或者熱灰。
17. 當沒有安裝塵盒或過濾網時，不要使用。否則會損害電機。
18. 如果電源線出現破損，需要更換電源線時，務必由專業人員或者指定維修點行進。切勿擅自拆卸。以免造成危險。
19. 孩童應受監護，以確保孩童不嬉玩電器。
20. 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用，除非在對其負有安全責任的人員之監護或指導下安全使用。

產品部件名稱及示意圖

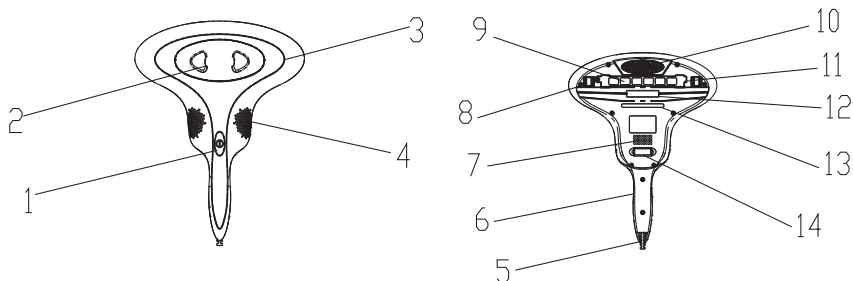

- 1. 電源按鈕
- 2. 塵杯
- 3. 上殼
- 4. 熱出風口
- 5. 電源線

- 6. 下殼
- 7. 下出風口
- 8. 小滾輪安全開關
- 9. UV燈管
- 10. 高頻震動拍打頭


- 11. 燈管蓋板
- 12. 吸入口
- 13. 靜電條
- 14. 後輪

產品技術參數

額定電壓及頻率	AC 110V /60Hz
總額定消耗電功率	300W
真空度	≥8Kpa
集塵容量	0.35L
產品淨重	1.2KG
主機尺寸	340*280*125mm

整機操作說明



1. 將電源線插頭插入插座接通電源，按下電源開關按鈕，機器開始吸塵工作

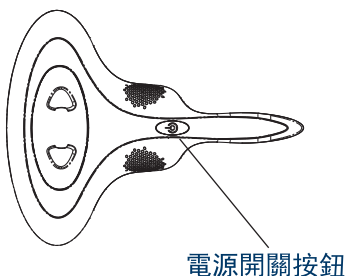

2. 將機器放置在要清潔的物品上(例如床上)，小滾輪開關須完全向下壓平，此時機器前部UV燈亮起，高頻震動拍打頭開始工作，緩慢來回推拉機器，進行清潔工作。（建議清掃速度小於20秒每米，來回三次）



3. 當吸塵工作時會顯示吸塵狀態

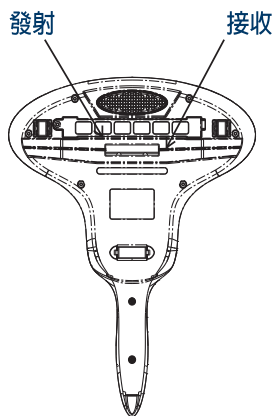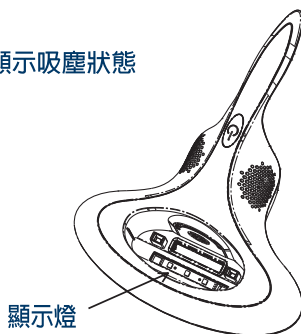


清潔和保養


定期清潔高效過濾HEPA，因為吸附的棉絮中蟎蟲有可能沒有殺死，會繼續繁殖，為避免二次污染，清潔後應對HEPA過濾網進行清洗，或者更換新HEPA。

1. 關閉電源拔除插頭，按下塵盒元件中心位置，塵盒向上彈出後解鎖，向上提出塵盒，進行清潔保養，塵盒放入塵室後，向下按塵盒中心位置，塵盒鎖扣自動上鎖。

向下按塵盒中心位置開鎖

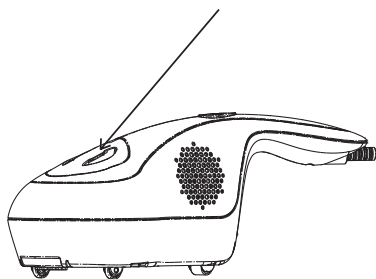


向上提出塵盒

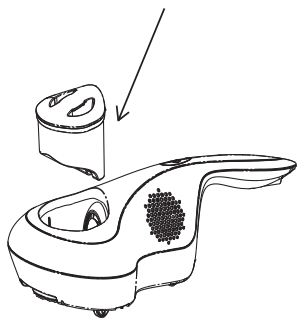

2. 將塵盒內的HEPA取出，對塵盒和HEPA過濾進行清理，用水清洗乾淨後晾乾後可以繼續使用。

從塵盒內取出HEPA過濾網

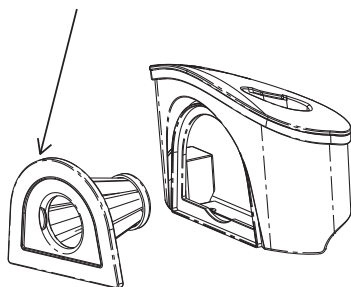

機器清潔

1. 所有的日常保養和維護工作都必須在吸塵器電源插頭拔掉以後進行。
2. 經常清理塵盒內垃圾，避免吸塵器出現故障。
3. 吸塵器表面不可以用汽油或油狀物擦洗，應用軟布或中性洗潔精擦洗，擦洗時擦布一定要擰乾，不可將水滲入吸塵器電器元件內。
4. 將電源線捆紮好後與機器一起收納好。
5. 存放地要保持乾燥。
6. 機器上方不宜堆放重物。

常見故障排除

在遇到如下一般性問題時，用戶可自行排查：

注意：發現以下問題時，請立刻關閉開關，防止損害機器和造成其他危害

問題現象	可能原因	解決方法
無法開機	插頭沒有插到位	重新插一次插頭，並確保安插到位
	插座沒有電	換到別的插座試一試
產品發出非正常聲音	塵灰已滿，或風道被堵塞	取出塵桶，清理垃圾或堵塞物
吸入能力降低	灰塵已滿，或者過濾太髒	"清理塵盒灰塵，清洗過濾網（清洗過的過濾網，在徹底乾燥之前不能安裝到產品裡，以免損害電機）
	電壓不穩定	待電壓穩定後繼續使用
使用中有灰塵吹出	塵盒裡過濾裝置破損	立刻停止使用，更換新的過濾網
	過濾HEPA忘記安裝	立刻停止使用，把HEPA安裝到位
高頻震動拍打頭 UV燈不工作	安全開關（小滾輪）沒有和表面接觸	小滾輪安全開關，需安全向下壓平

Table of Contents

1. Important Safety Instructions.....	2
2. Product Part Names and Diagrams.....	3
3. Product Technical Parameters.....	3
4. Operating Instructions for the Entire Machine.....	4
5. Cleaning and Maintenance.....	5
6. Cleaning the Machine.....	6
7. Common Troubleshooting.....	7

Disclaimer

Declaration:

This manual has been checked and proofread carefully, but there is still the possibility of typos and technical errors; please subject to the actual machine if there is mismatch with the actual machine due to errors. Such mistakes or omissions cannot be used as proof in court and will be corrected in later revisions.

Our company reserves the right to modify all contents of this manual at any time without further notice.


Important Safety Instructions

Please comply with the following basic warnings when using this product:


Do not stare directly into a lit UV lamp at any time in order to avoid injuries.

1. UV ultraviolet rays will harm the skin and eyes of human and animals; do not shine directly to the human body, plants or animals.
2. Perform partial testing for objects to be sterilized by irradiation in advance in order to avoid damaging light-sensitive objects or non-anti-UV objects.
3. Do not damage the wheels (safety switch) at the bottom of the product intentionally, as doing so will result in loss of protection for the UV lamp.
4. Do not touch the conductive female socket of the handheld vacuum cleaner with your hand intentionally in order to avoid the risk of electrical shock.
5. Please unplug the power cable when not in use and before cleaning or maintenance.
6. In order to reduce the risk of electric shock, do not use this product outdoors or on wet surfaces.
7. Use this product according to the instructions in this manual, and only use the functions recommended in this manual.
8. When the plug or power cable is damaged, cease usage immediately. When the product no longer works due to being dropped, damaged, placed outdoors or accidentally dropped into water, please send it to the service department for repairs.
9. This product is for general household use only; do not use it for commercial or other purposes.
10. Avoid vacuuming sharp objects such as glass shards and screws etc. in order to prevent damaging the machine.
11. Do not use the power cable as a handle and tugging on the power cable while it is against sharp edges is strictly prohibited. Also do not place the vacuum cleaner on hot surfaces.
12. Do not use the product when any of the air ducts is blocked otherwise it will damage the motor. Keep the product away from dust, cotton wool, hair and anything else that may block or reduce the air volume when storing.
13. Keep your hair, cloths, mobile phone and any part of your body far away from the opening and moving components of the vacuum cleaner.
14. Please turn off the machine switch first before unplugging the power plug.
15. Please disconnect the power of the machine before assembling accessories.
16. Do not attach any burning or smoking objects such as cigarette butts, matches or hot ashes.
17. Do not use the product when there is no dust box of filter installed; otherwise the motor will get damaged.
18. If the power cable is ruptured and the power cable needs to be replaced, please have it replaced by a professional staff or designated repair location. Do not disassemble by yourself in order to avoid causing danger.
19. Children should be supervised to ensure they do not play with electrical appliances.
20. This electrical appliance is not intended for use by users (including children) with physiological, perceptual or mental deficiencies or lack of experiences and knowledges, unless used safely under the supervision and guidance of personnel responsible for their safeties.

Product Part Names and Diagrams

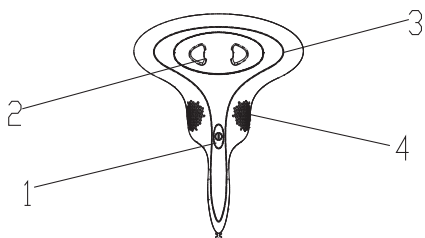

- 1.Power button
- 2.Dust cup
- 3.Top cover
- 4.Hot air outlet
- 5.Power cable

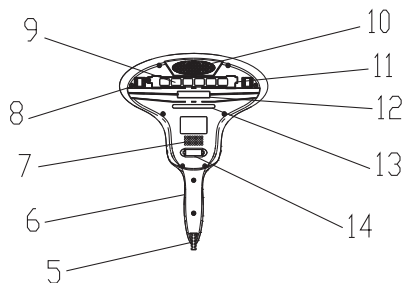

- 6.Bottom cover
- 7.Bottom outlet
- 8.Safety switch
- 9.UV lamp
- 10.Rotating brush head


- 11.Lamp cover
- 12.Suction port
- 13.Electrostatic strips
- 14.Rear wheel

Product Technical Parameters

Rated voltage and frequency
Total rated power consumption
Vacuum degree
Dust collection capacity
Product net weight
Host dimensions


Operating Instructions for the Entire Machine

1. Insert the power cable plug into the socket to connect the power, press the power switch and press the machine to start operating.

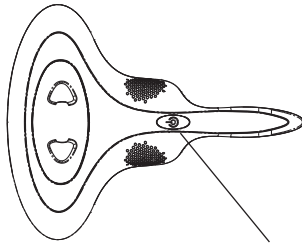


Press the power switch button

2. Place the machine on the object to clean (such as the bed), turn on the power switch, and push the safety lever down so that it is flat against the surface. Now the UV lamp in front of the machine will light up, meaning that the UV lamp has started operating. Slowly push and pull the machine forward and backward to perform the cleaning operation. (Recommended cleaning speed is less than 20 seconds per meter, and push and pull back and forth for three times.)

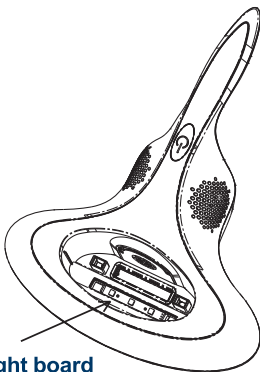


LED light board

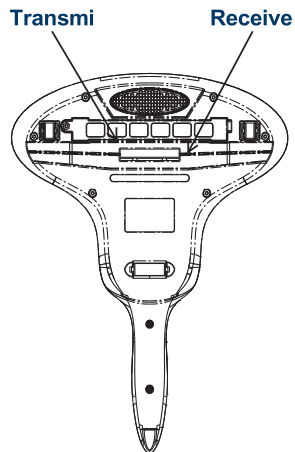

Cleaning and Maintenance


Clean the high efficiency filter HEPA regularly because the mites attached in the cotton wool might not be dead and will continue reproducing. In order to prevent secondary contamination, the HEPA filter should be cleaned after vacuuming, or replace with a new HEPA.

1. Turn off the machine and press the center position of the dust box component; the dust box will eject and unlock. Lift upwards to remove the dust box. After placing the dust box back into the dust chamber, press the center position of the dust box down, and the dust box lock will lock in place automatically.

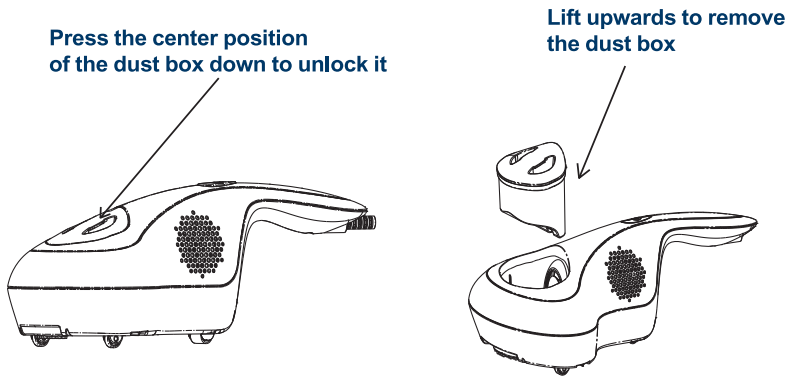

2. Remove the HEPA inside the dust box and clean the dust box and HEPA filter; clean them thoroughly with water and then let them dry, and then they can be used again.

Remove the HEPA filter from the dust box

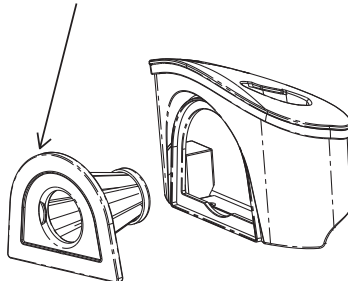

Cleaning the Machine

1. All daily maintenance and repair operations must be performed after the power plug of the vacuum cleaner has been unplugged.
2. Clean the waste inside the dust box frequently in order to prevent the vacuum cleaning from malfunctioning.
3. The surface of the vacuum cleaning cannot be wiped and cleaned with gasoline or oily substances; it should be wiped and cleaned with soft cloth or neutral detergents. The cloth has to be wringed out when wiping and do not let water penetrate into the electric components of the vacuum cleaner.
4. Bind the power cable store it with the machine properly.
5. The storage location must be kept dry.
6. Do not place heavy objects on top of the machine.

Common Troubleshooting

When the following general problems are encountered, users can troubleshoot on your own:
 Note: When the following issues occur, switch off the power immediately in order to prevent damaging the machine and causing other hazards.

Problem Phenomenon	Possible Cause	Solution
Cannot turn on	Plug not fully inserted	Reinsert the power plug again and ensure that it is fully plugged in
	No power from socket	Try switching to another socket
Product makes abnormal sounds	The dust is full or the air outlet is blocked	Remove the dust bucket and clean the waste or blockage
Reduced suction power	The dust is full or the filter is too dirty	Clean the dust inside the dust box and clean the filter (Filter that was just cleaned must not be installed back into the product until it is fully dried in order to prevent damaging the motor)
	Voltage unstable	Wait until the voltage stabilizes and then continue use
Dust blows out during use	Filter device inside the dust box has ruptured	Cease usage immediately and replace a new filter
	Forgot to install the HEPA filter	Cease usage immediately and install HEPA properly
UV lamp does not operate	The handheld vacuum cleaner is not placed into the proper position of the base	Cease usage immediately and place the handheld vacuum cleaner into the correct position of the base
	Safety switch (small wheel) did not come in contact with the surface	The bottom of the product will only start operating once it comes in contact with the surface

非常感謝您：

承蒙惠購本產品，本公司除表達最高謝意外，並將本著一貫的服務精神，隨時為您提供最佳服務，在您使用前務請詳閱本說明書，並依正確方法使用，閱讀完畢後請妥為保管，以備日後使用參考。

商品保證書

機型：BPH-V03M

購買日期： 年 月 日

顧客	姓名	電話:
	地址	
經銷商		

- 一. 上列保證書應確實填寫，並蓋有經銷商店章始為有效。
- 二. 免費服務年限為一年，自購買日起一年內，在正常使用下，如發生故障，則免費維修，但人為或天災地變或蟲害，不在此限。(如需服務換修零件，則按本公司服務規定，收取維修費)。
- 三. 收費服務年限為兩年，收費服務兩年內，如需維修則按本公司服務規定，收取維修費。
- 四. 免費再延長6個月保固：請即刻上本公司網站：<http://wonder.tw> 登錄購買的產品。
網路登錄產品註冊【需先加入旺德會員】，註冊成功該產品既享有延長保固6個月時間。
本公司網站另有多項優惠與服務，敬請多加利用。
- 五. 自然耗材不在保固範圍內(例：電池、充電電池、天線、磁頭、雷射頭、耳機、遙控器、信號線、燈泡、刀具組、濾網、線材與隨機附贈之軟體及其他配件…)。
- 六. 本保證書遺失恕不補發，但如需服務，則依出廠日期，計算保證年度。
- 七. 本商品無外修服務，如有另行約定則外出檢修費，依本公司規定收取；若發生故障請送回原購經銷商或親洽本公司所屬營業所。
- 八. 本商品維修範圍僅於“台、澎、金、馬”(需付擔一趟郵資)，其餘地區請自付來回郵資。
- 九. MP3、音響…等產品送修時，內存的資料(數位、類比)有可能流失，建議送修前請先行備份，若有資料遺失之情形，本公司將不負任何賠償責任，郵寄維修視同同意本條款。
- 十. 本商品使用於營利商業用時，其保證期限按保證書所載期限減半保固。

宣告：

說明書業經仔細檢查及檢對，但仍不排除文字拼寫及技術錯誤之可能，此種錯誤或疏漏將於新版予以修正。本手冊之全部內容，本公司享有隨時修改之權利，且不另行通知。

消費者專線及售後服務據點

台北 (02)8990-4440 新北市五股區五工三路116巷6號
台中 (04)2473-8199 台中市南屯區東興西街 76 號
高雄 (07)371-4688 高雄市仁武區仁雄路 9 6 號

委製/進口商

旺德電通股份有限公司

新北市五股區五工三路116巷6號
服務專線:(02)8990-4440
<http://wonder.tw>
E-mail:service1@wonder.tw