



Instruction Manual

15.6" Portable Monitor - BP15PM60



Enjoy it.

CONTENTS




General Safety	4
<hr/>	
Installation	
<hr/>	
Wall or Arm Mounting Instructions	8
<hr/>	
Attaching the Magnetic stand	9
<hr/>	
Controls and Connections	10
<hr/>	
Operation	
<hr/>	
Brightness	11
<hr/>	
Image	12
<hr/>	
Color Temp.	13
<hr/>	
OSD	14
<hr/>	
Reset	15
<hr/>	
MISC.	16
<hr/>	
Specifications	17
<hr/>	
Customer Helpline	Last Page
<hr/>	

GENERAL SAFETY

Read this manual thoroughly before you start using the Monitor.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>The cover (or back) of the unit should not be removed to prevent risk of electric shock.</p> <p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the monitor or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Monitor set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this Monitor during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Make sure to always carry Monitor from the sides, always be sure to have assistance by another person. Do not carry the Monitor from the middle.

WARNING!

Toppling furniture and Monitor's can cause serious injury or death.

If a monitor is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the monitor.
- Ensuring the monitor is not overhanging the edge of the supporting furniture.
- Not placing the monitor on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the monitor to a suitable support.
- Not standing the monitor on cloth or other materials placed between the monitor and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the monitor or its controls.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Monitor set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Monitor set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer. Please ensure the monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

 
Wall OR Monitor Arm Mounting Instructions

Please ensure the Monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the Monitor on your own.

BACK OF MONITOR

VESA PATTERN: 75 (w) x 75 (h) mm

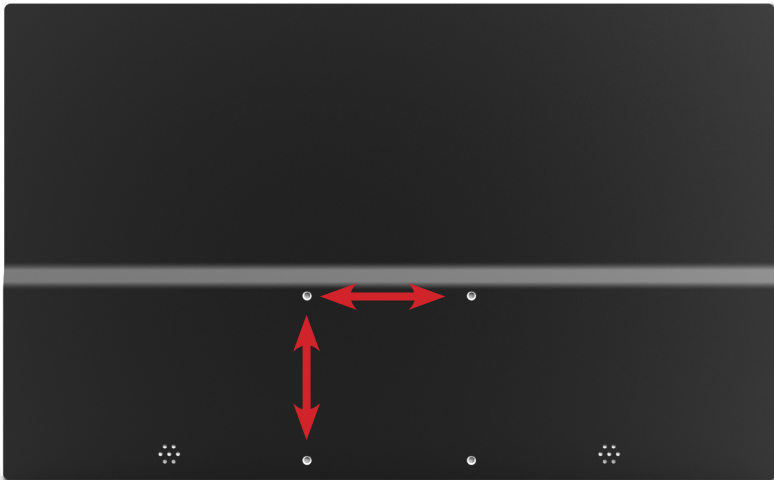

CAUTION! Do not apply excessive force as this may damage the screw holes.

 
INSTALLATION (CONT.)

ATTACHING THE MAGNETIC STAND (REFER TO BELOW IMAGES)

- Step 1** - The Foldable stand will already be attached to the back of portable monitor. Lay it down flat as shown below.
- Step 2** - Fold the bottom single row of the stand, up and ontop of the middle row as it will attach with magnetic force.
- Step 3** - Now you can stand up the Portable Monitor, aiming the bottom of the monitor outwards and into the groove at the end of where you originally folded the case.
- Step 4** - The monitor will now be standing upright and supported correctly, you can begin next steps in connecting the Portable Minitor to Power and your Device.




CONTROLS AND CONNECTIONS

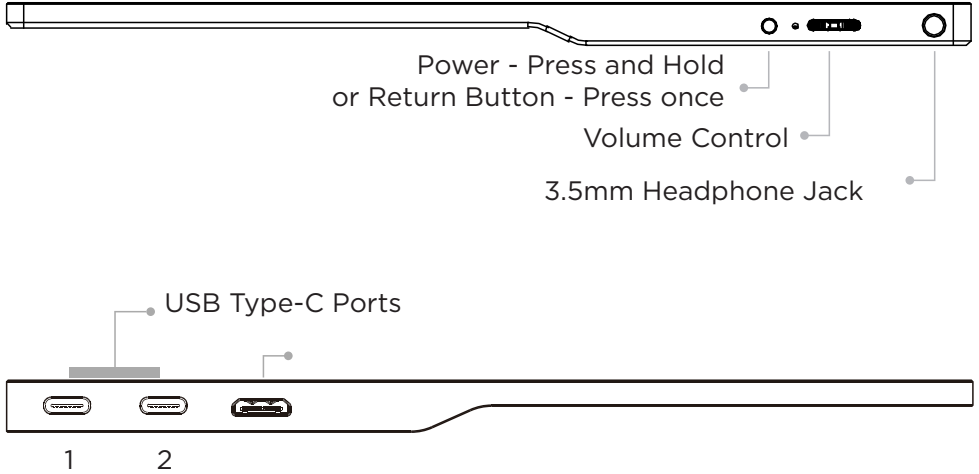

USB TYPE-C PORTS -

 
- 1 - Can be used for Power (Adaptor Included)
- 2 - Can be used for USB Type-C to USB Type-C Video Display.
Connect USB Type-C into your Portable Monitor
Connect other end of USB Type-C to your Laptop or PC to display the video from device to your Portable Monitor.

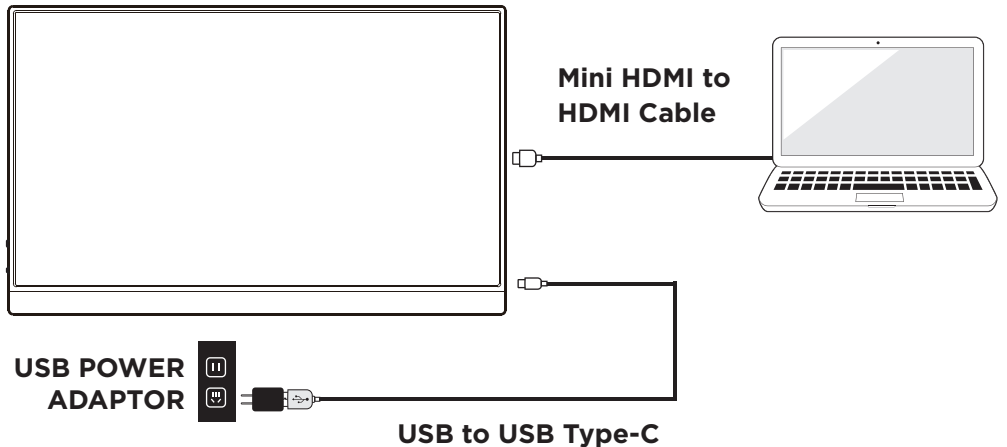

OPERATION

BRIGHTNESS

 - Brightness
- Contrast
- ECO
- DCR
- Sharpness
- Save brightness

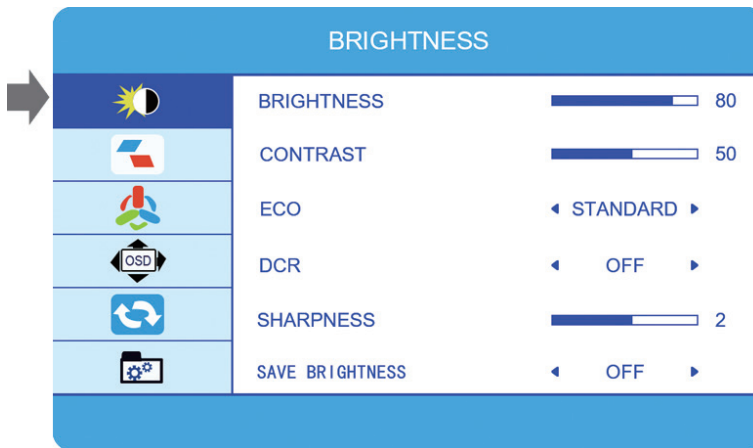

Brightness

This item can adjust the optical fiber output of the entire picture, and it will affect the dark region of the picture. (0-100)

Contrast

This item can adjust the highlight intensity of the picture, (0-100) but the shadow of the picture is invariable.

ECO

your selection STANDARD, RTS, FPS, TEXT, MOVIE, GAME Mode.

OPERATION (CONT.)

IMAGE

 
- H. Position
- V. Position
- Clock
- Phase
- Aspect (WIDE/4:3)



OPERATION (CONT.)

COLOR TEMP.

- Color Temp.
- RED
- GREEN
- BLUE

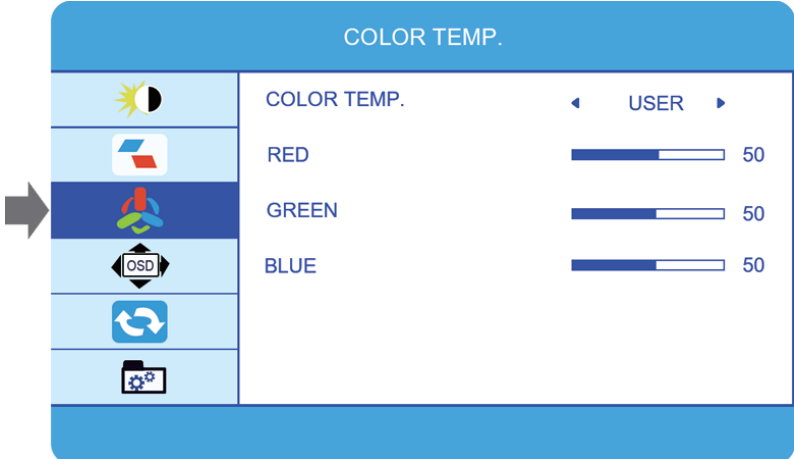

OPERATION (CONT.)

OSD SETTING

- Lanauage
- OSD H. POS.
- OSD V. POS.
- OSD TIMER
- Transparency


The image shows a screenshot of an OSD (On-Screen Display) settings menu. The menu is titled "OSD SETTING" and is displayed in a blue-themed interface. A grey arrow points to the "OSD" option in the left-hand menu, which is highlighted in dark blue. The right-hand side of the screen shows the settings for each option, with progress bars indicating their values.

Setting	Value
LANGUAGE	
OSD H. POS.	50
OSD V. POS.	50
OSD TIMER	10
TRANSPARENCY	0

OPERATION (CONT.)

RESET SETTING

 
- Image Auto Adjust
- Color Auto Adjust
- Reset
- Auto Powerdown
- HDR mode

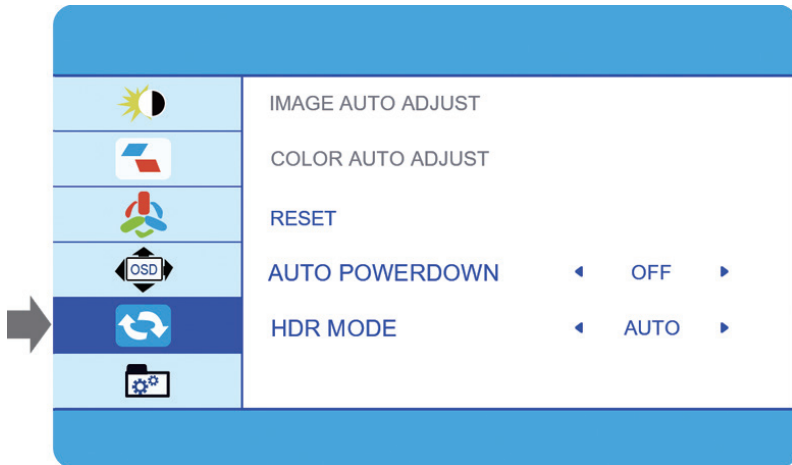

OPERATION (CONT.)

MISC.

 - Signal source
- Low Blue light
- Volume
- Freesync
- OD

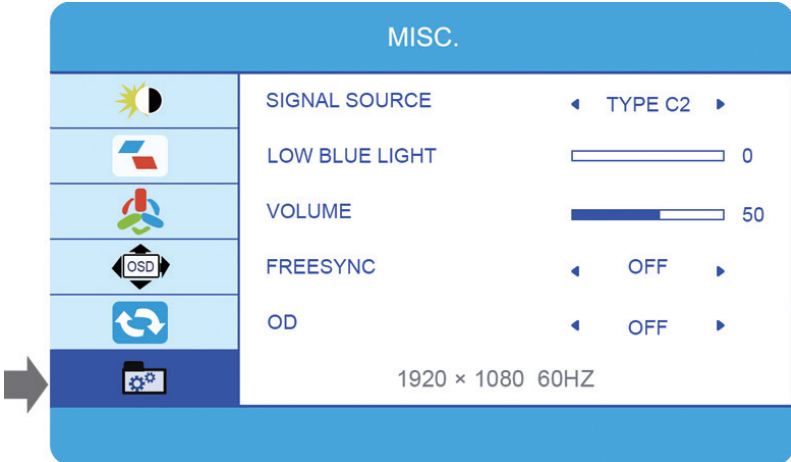

SPECIFICATIONS

Resolution	1920 x 1080	
Display Colours	16.7 Million	
Contrast ratio:	800 : 1	
Brightness	220-350 cd/m2	
Refresh Rate	60Hz	
Power Source	5V $\overline{\text{---}}$ 2A	
Dimensions	With stand: 354 (w) x 9 (d) x 218 (h) mm	
Accessories	1 x Instruction Manual	1 x Warranty Card
	1 x Foldable case/stand	1 x Mini HDMI to HDMI Cable
	1 x USB-C to USB-C Cable	1 x Power Adapter



CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd