



Instruction Manual

27" Full HD Monitor - BP27M75



Enjoy it.

CONTENTS




General Safety	4
Installation	8
Wall Mounting Instructions	9
Controls and Connections	10
Menus	11
Picture Settings	12
Colour Settings	13
Audio Settings	14
Gaming Settings	15
OSD Menu	16
System Settings	17
Information	18
Specifications	19
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the Monitor.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>The cover (or back) of the unit should not be removed to prevent risk of electric shock.</p> <p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the monitor or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Monitor set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this Monitor during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Make sure to always carry Monitor from the sides.
Do not carry the Monitor from the middle.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Monitor set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Monitor set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

INSTALLATION

 
 
Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer. Please ensure the monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

Attaching the monitor base

Step 1 - Attach the monitor stand arm to the base. Secure the base to the arm of the monitor stand base.

Step 2 - Remove the monitor from the box and lay it face down on a table on top of a soft towel to protect the screen. Secure the base to the arm of the monitor stand base.

Step 3 - You can stand the monitor upright and commence to the next step.

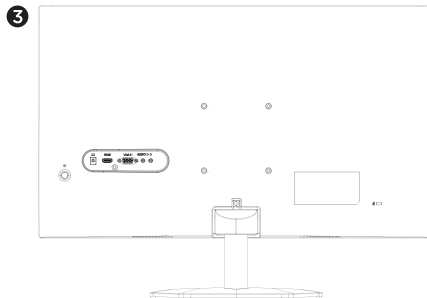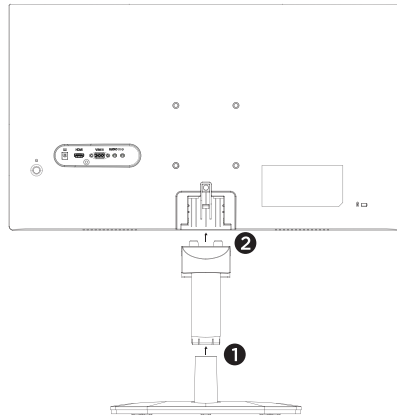

CAUTION!

8 Do not apply excessive force as this may damage the screw holes.

INSTALLATION (CONT.)

Wall-Mounting or Monitor Arm Brackets for Desk Instructions

Please ensure the Monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the Monitor on your own.

 
BACK OF Monitor

VESA PATTERN: 100 (w) x 100 (h) mm



NOTE: If you are wall-mounting the Monitor, this should be done by a qualified installer.

CONTROLS AND CONNECTIONS

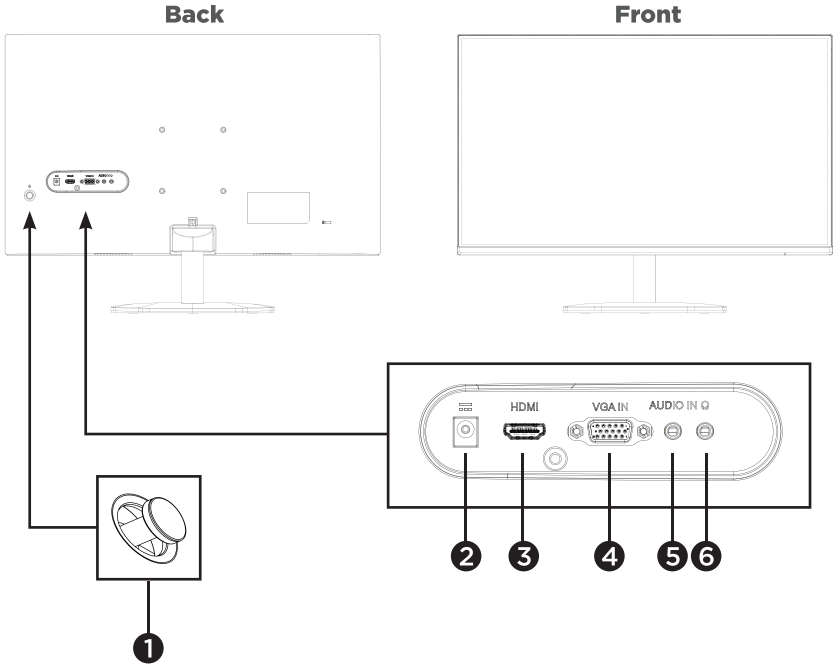

1



- Joystick button: Power On/Off, Menu Control (long press the button for power off).

2



- Connect the power cord to the monitor then into a properly grounded AC outlet.

3



HDMI -

The digital interface is used to transmit the uncompressed video image and audio signal from the monitor to the external device at the same time.

4



VGA IN -

This is an analog connector that connects monitor to the system unit.

5



AUDIO IN -

Connect the audio cable.

6

 
 


- Headphones.

MENUS

Find more details


Press the MENU button and personalize the Picture, Color, and other settings to best fit your viewing needs.

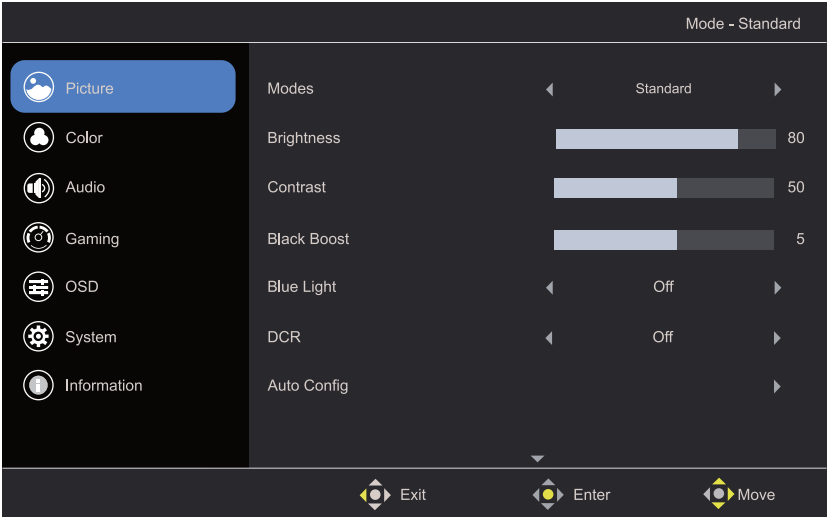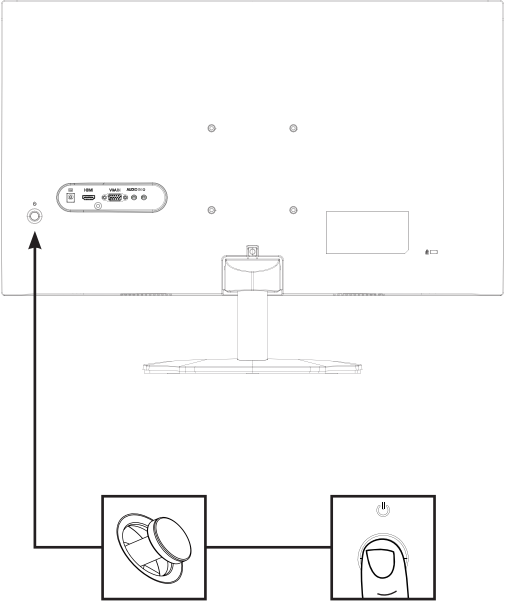

MENUS

PICTURE

 - **Modes** - Action, Racing, Sports, Use, Standard, ECO, Graphics, Movie
- Brightness
- Contrast
- Black Boost
- Blue Light
- DCR
- Auto Config (VGA connection is optional, but HDMI connection is not.)
- H.Position (VGA connection is optional, but HDMI connection is not.)
- V.Position (VGA connection is optional, but HDMI connection is not.)
- Focus (VGA connection is optional, but HDMI connection is not.)
- Clock (VGA connection is optional, but HDMI connection is not.)

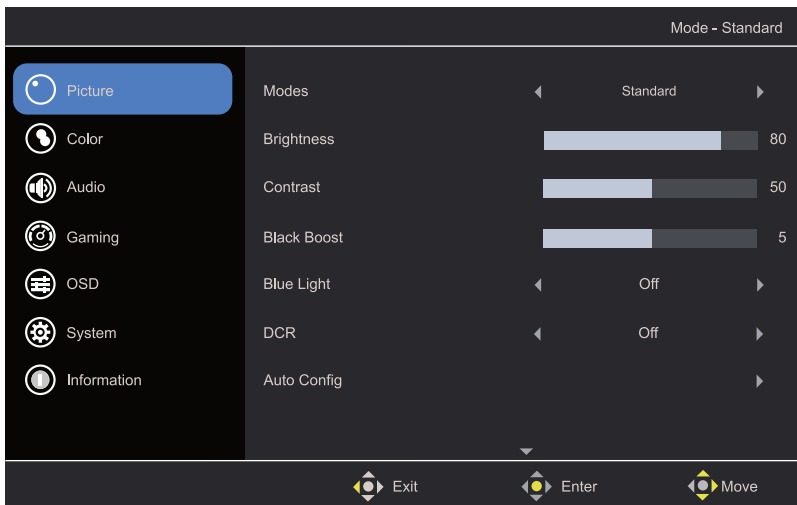


MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

Middle button - ENTER

Left button - EXIT

 
Up/Down/Right - MOVE



MENUS (Cont.)

COLOUR

 
- Gamma
- Colour Temp. (R.G.B can be adjusted only in the User state, but not in the Warm,Normal, and Cool states.)

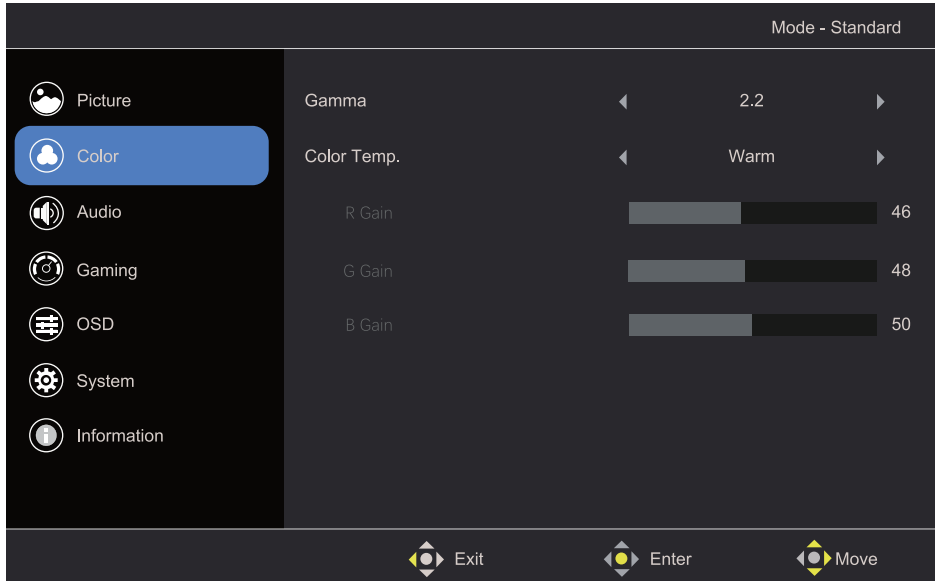

MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

 
- Middle button - ENTER
- Left button - EXIT
- Up/Down/Right - MOVE



MENUS (Cont.)

AUDIO

 
- Volume
- Mute

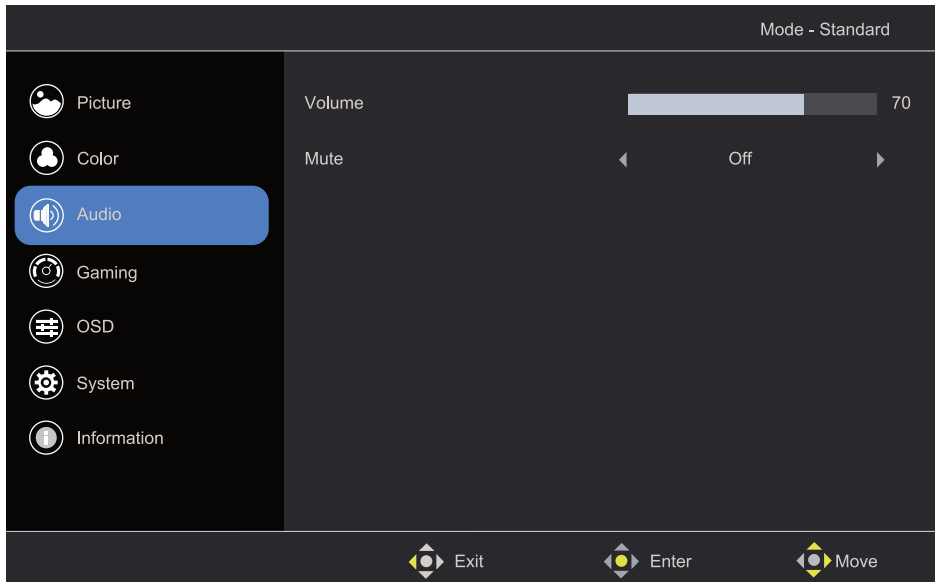

MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

 
- Middle button - ENTER
- Left button - EXIT
- Up/Down/Right - MOVE



MENUS (Cont.)

GAMING

 - **OVER DRIVE** - Response time overdrive allows you to push the monitor's response time speed (pixel transition time) in order to decrease the trailing/ghosting artifacts behind fast-moving objects.
- **ADAPTIVE SYNC** - (The VGA source does not support adaptive-sync.) - Dynamically sync the monitor's refresh rate to the GPU's frame rate to eliminate screen tearing and reduce game stuttering.
- **TR-1MS** - (The TR-1MS can only be turned on if the computer's refresh rate is at least 75Hz.) - Dynamic screen response time.
- **REFRESH RATE NUMBER** - Display refresh rate on monitor.
- **AIM POINT** - Select different types of the aim point.

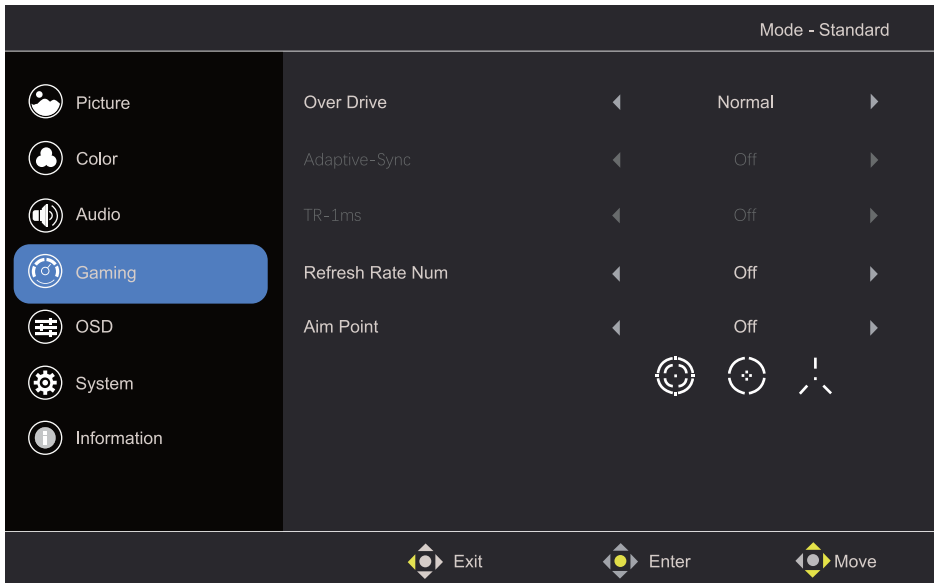


MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

Middle button - ENTER

Left button - EXIT

 
Up/Down/Right - MOVE



MENUS (Cont.)

OSD (MENU)

 - Language
- OSD Timeout
- Transparency

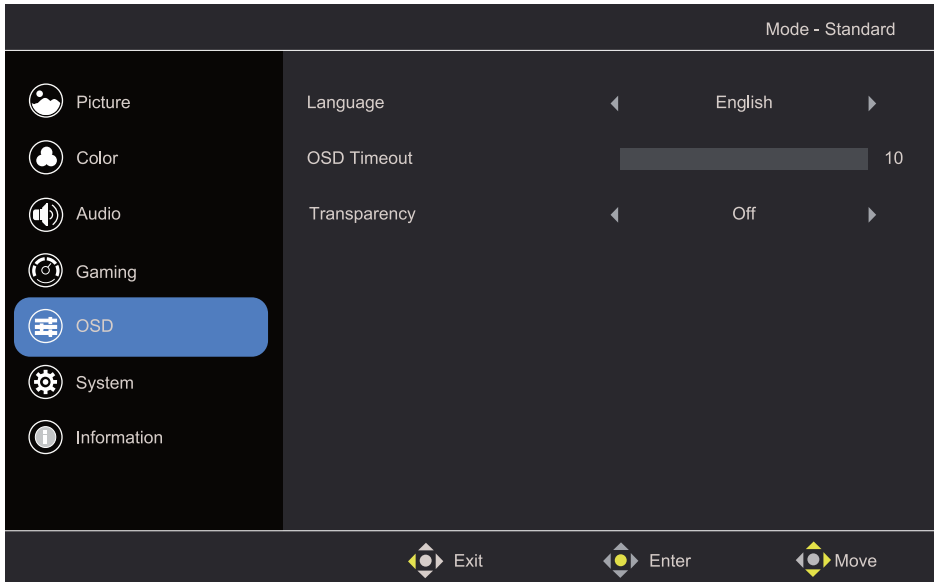

MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

Middle button - ENTER

Left button - EXIT

 
Up/Down/Right - MOVE



MENUS (Cont.)

SYSTEM

- Input
- Auto Source
- Wide Mode
- DDC/CI
- Quick Start Mode

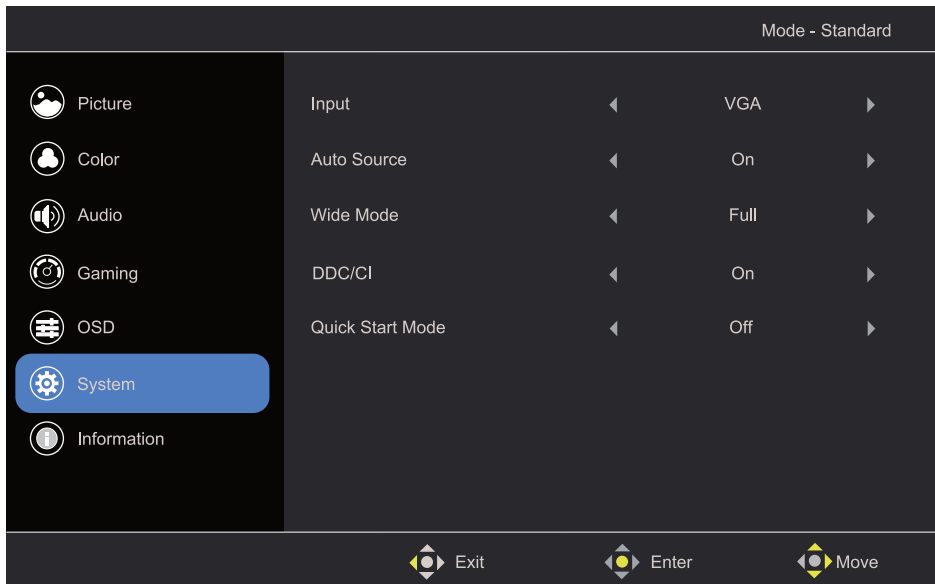

MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

Middle button - ENTER

Left button - EXIT

 
Up/Down/Right - MOVE



MENUS (Cont.)

INFORMATION

- Main Source
- Resolutio
- H/V Frequency
- Mode
- Series Number
- Reset all settings

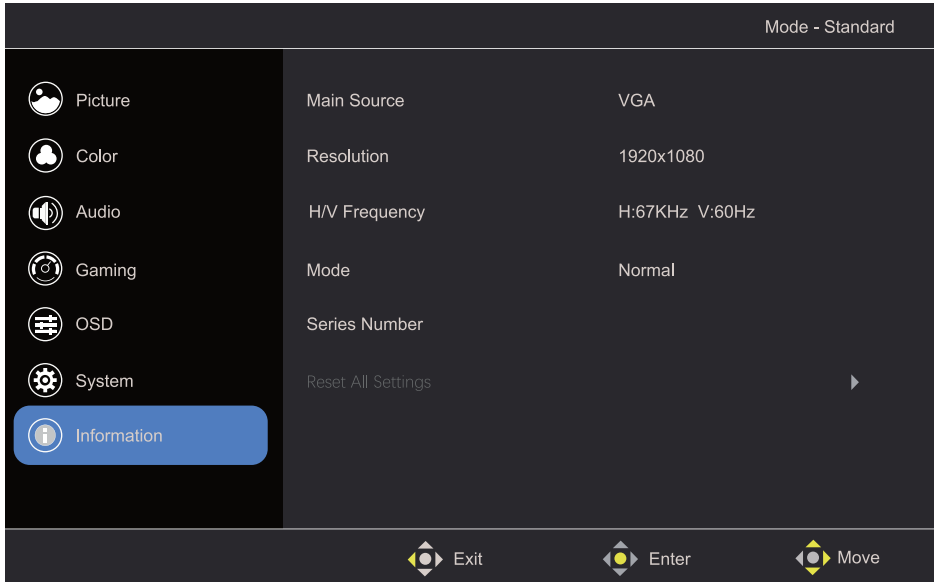


MONITOR BUTTONS REFER:

Button located at the back lower right hand side of monitor.

Middle button - ENTER

Left button - EXIT

 Up/Down/Right - MOVE



SPECIFICATIONS

Resolution	1920 x 1080
Display Colours	16.7M
Contrast ratio:	4000: 1
Refresh Rate	75Hz
Brightness	250 cd/m2
Power Source	12V $\overline{\text{---}}$ 3.5A or 4A
Dimensions	With stand: 613.4 (w) × 224.5 × 456.4 (h) mm
	Without stand: 613.4 (w) × 39.9 × 360.8 (h) mm
Weight	Net: 3.6 kg
	Gross: 5 kg



CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd