


SUPPORT
info@ayonz.com

SELF-INFLATABLE SCREEN BPS1080WPS

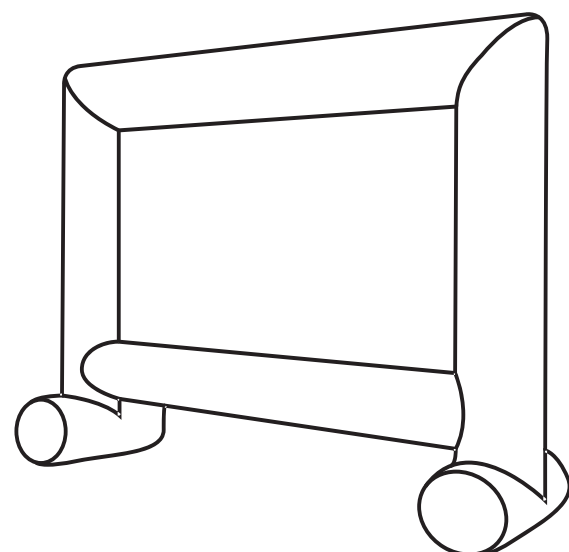

Package Contents

- 1 x Detachable Movie Screen
- 1 x Inflatable Frame
- 1 x Carry Bag
- 1 x User Manual



6 x TIE DOWN ROPES



SELF-INFLATABLE
BLOWER



6 x TETHER STAKES



1 x CARRY BAG

Specification

Screen Size:	117" (inches)
Aspect Ratio	16:9
Viewing Angle	160 Degree
Frame Material	Oxford Cloth
Screen Material	Cloth
Movie Screen	Detachable


Product Care

- Before using and reusing, inspect the product carefully.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Unplug the product when not in use. Store neatly in a cool, dry location protected from sunlight.
- Do not place it where small children can reach it.
- Do not hang ornaments or other objects from cord, wire.
- Protect the electric fan and power cord from direct exposure to water. This precaution will reduce the risk of electrical shock.
- When the temperature is below 10°F (-14°C), the motor may temporarily stop running. The motor will begin functioning again in higher temperatures.
- Do not attempt to inflate the item during unusually strong winds. If it becomes too windy for safe operation, simply allow the item to deflate and wait for better conditions before re-inflating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

How to inflation?


Step 1:

Remove contents from packaging and lay out this product in a clear, flat area. Ensure that the inflatable frame is lying so that the white movie screen is facing up.

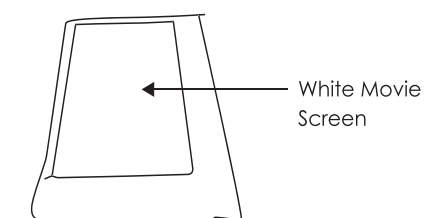

Step 2:

Find the air mover and place it away from anything that may obstruct its fan.

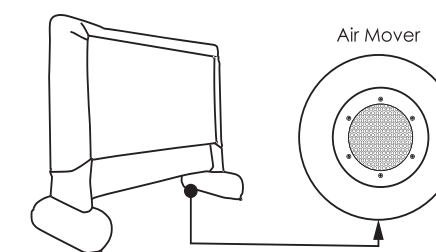

Step 3:




Plug cord into outlet device to inflate the item. This process may take a few minutes. Make sure the air intake is clear of fabric or other obstruction and zipper is fully closed.

Step 4:

Stand the item upright, ensuring that fans are away from obstructions.


Step 5:

For outdoor use, Tie the ropes through each anchor point (6 points) and lock with stakes.

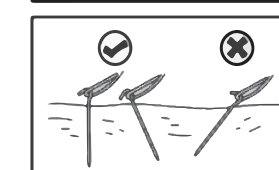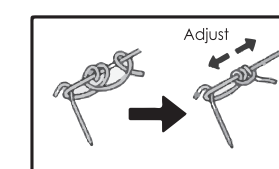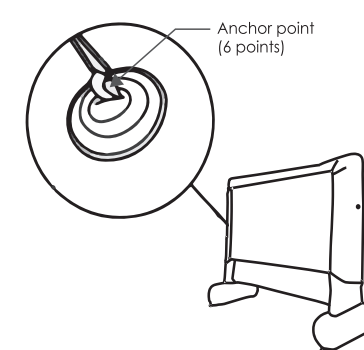


How to Deflate and Store?


1. Remove the plug and open zipper to release air.

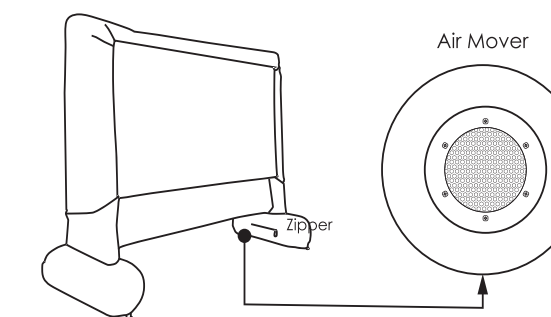

2. Flatten the screen with white movie screen cloth up to avoid dirtying the screen.

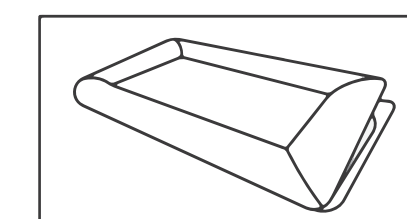

3. Fold in half 3 times vertically.

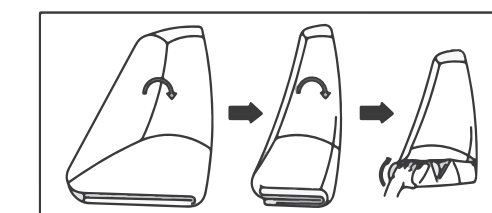

4. Place in carry bag.

