

BLAUPUNKT



POWER SPEAKER BGx 4 SERIES



BGx 4404



BGx 4504



BGx 4604



BGx 4695

Enjoy it.

Operating and Installation Instructions

CAUTIONS

Proper system planning is vital in order to maximize the device's performance and road safety. Plan your installation carefully to avoid compromising performance reliability of the system. Consult an authorized Blaupunkt dealer for installation or preparation. Read the manual carefully before operating the device for the first time.

Safety Notes

Ensure to follow below safety notes during installation and wiring connection: -

- Disconnect the negative terminal of the battery. Refer to the safety notes of the vehicle manufacturer.
- Ensure positions of the holes are nowhere near the vehicle component to avoid any damage during drilling.
- Ensure cross section of the cable is no less than 2.5mm² if the positive and negative cables are too long.
- Incorrect installation may result in malfunction of the device or the car sound system.

Installation and Connection Instructions

- Select a dry and well-ventilated location to install the device.
- The device must not be installed in overly exposed location such as on the rear shelf, rear seat etc.
- The installation location must be suitable for screw holes and have stable ground support.

Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada.

Voltage Supply

- Use the supplied power extension cable to connect to the positive battery terminal.
- Firmly and carefully connect the ground lead to a bare metal point on the vehicle chassis.
- The control of the device should be a two-channel control, either via the preamplifier output of the car sound system.
- A control solely via the right or left channel is also possible since the low-frequency portion of the music is generally identical on both channels.

Disposal Notes





Do not dispose of your old unit in the household trash!
Use the return and collection systems available to dispose of the old device.

This manual may be updated from time to time without any notice. Visit www.blaupunkt.com for more info.

SPECIFICATION

  BGx 4404

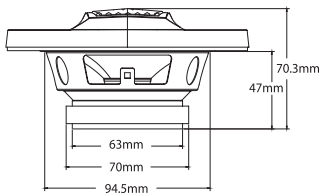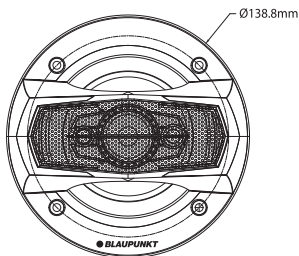


Pair of 4.0" 4-way quadaxial speaker with PP Injected Cone including mounting hardware

- Max. Power Handling : 45W
- Normal Output Power (RMS) : 15W
- Impedance : 4ohms
- Frequency Response : 100Hz - 20,000Hz
- Sensitivity : 85dB
- Mounting Depth : 47mm
- Diameter Hole : 115mm


Accessories



 8 x M-Type Screws
(4x25mm)




8 x Cable Clips

 

2 x 1.8m Wire Harness

SPECIFICATION

 BGx 4504

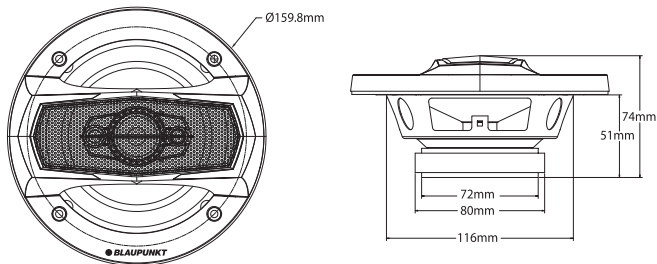


Pair of 5.0" 4-way quadaxial speaker with PP Injected Cone including mounting hardware

- Max. Power Handling : 60W
- Normal Output Power (RMS) : 20W
- Impedance : 4ohms
- Frequency Response : 90Hz - 20,000Hz
- Sensitivity : 85dB
- Mounting Depth : 51mm
- Diameter Hole : 135.5mm


Accessories



 8 x M-Type Screws
(4x25mm)




8 x Cable Clips

 

2 x 1.8m Wire Harness

SPECIFICATION

 BGx 4604

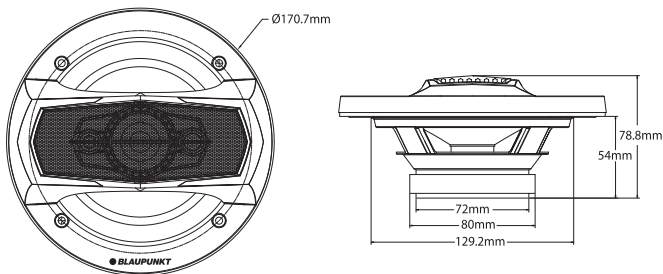

Pair of 6.0" 4-way quadaxial speaker with PP Injected Cone including mounting hardware

- Max. Power Handling : 90W
- Normal Output Power (RMS) : 30W
- Impedance : 4ohms
- Frequency Response : 65Hz - 20,000Hz
- Sensitivity : 86dB
- Mounting Depth : 54mm
- Diameter Hole : 142mm

 
Accessories



8 x M-Type Screws
(4x35mm)




8 x Cable Clips



2 x 2.5m Wire Harness

SPECIFICATION

 BGx 4695

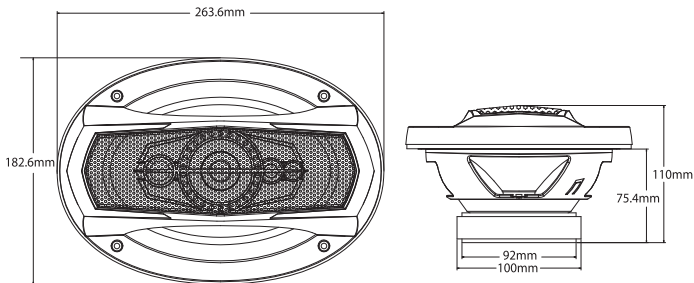

Pair of 6.0" x 9.0" 5-way pentaxial speaker with PP Injected Cone including mounting hardware

- Max. Power Handling : 120W
- Normal Output Power (RMS) : 40W
- Impedance : 4ohms
- Frequency Response : 45Hz - 20,000Hz
- Sensitivity : 88dB
- Mounting Depth : 75.4mm
- Diameter Hole : 121x167mm

 
Accessories



8 x M-Type Screws
(4x35mm)




8 x Cable Clips




2 x 2.8m Wire Harness

 INSTALLATION

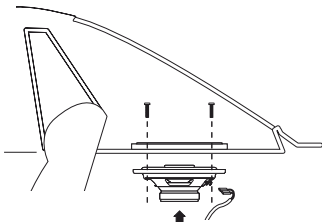


WIRING DIAGRAM

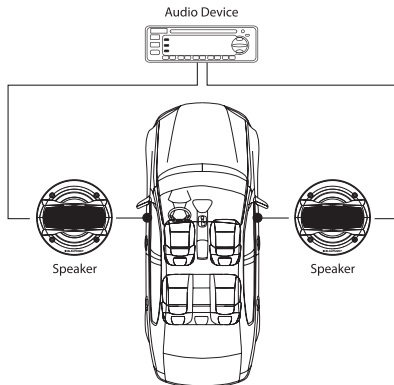 

TROUBLESHOOTING

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.

Problems	Possible Causes	Solutions
Speaker does not work	Incorrect or loose wiring connection.	Ensure proper wiring connections of speaker.
	Fraying or broken cables.	Repair or replace if the cables are damaged.
	Speaker is damaged.	Replace with a new speaker.
Distorted and hissing sound	Voice coil or speaker cone is damaged.	Replace with a new speaker.

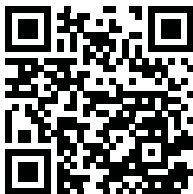 

BGx 4404
1 111 22 052 07 01

BGx 4504
1 111 22 053 07 01

BGx 4604
1 111 22 054 07 01

BGx 4695
1 111 22 055 07 01